

USER MANUAL

AI BOX

4CH / 8CH / 16CH



Copyright

Copyright

This manual without the manufacturer's approved copy and reprinted partially or in full, or translated into another language is prohibited.

Limitation of Liability

This product is designed to prevent fire and theft is not the main means. We shall not be liable for accidents or damage by using this product can result in liability for accidents or damage.

In order to improve the performance of the product without prior notice to the product may be a firmware upgrade.

Contents

1 Overview 06

1. Safety Instruction 06
2. WARNING 08
3. Key features 09

2 Components 09

1. Components 09
2. Names and functions of front panel 09
3. Name and functions of rear panel 10

3 Installation 11

1. Basic connection configuration 11
2. Network setting 11

4 System setting 17

1. Network setting 17
2. Change user password 18
3. Language setting 20
4. Date and Time setting 20
5. Firmware upgrade 21
6. Factory default 23

Contents

5 AI Source & Annotated Live Video 24

1. Video Source setting 24
2. AI algorithm 26
3. False detection filter setting 27
4. Face Recognition 28
5. Annotated Live Video 28

6 Action Rules 30

1. Action Rule Overview 30
2. AI Trigger setting 31
3. System Trigger setting 54
4. Schedule setting 55
5. Event Action setting 58

7 Statistics 78

1. Counting 78
2. Report 78

8 AI Marketing 80

Contents

9 Other Menu 84

1. Search 84
2. Display 85
3. System 87

10 Face Recognition 89

11 License Plate Recognition 95

1 Overview

1. Safety Instruction

The Company shall not have any responsibility for any accident or damage that may incur during the use of the product. For your safety, we provide a few instructions about installation, manipulation, cleaning, assembly/disassembly of the product as below. So please read carefully and comply with the instructions.

Before installation

Comply with the following instructions to prevent a fire, explosion, system failure or electric shock

- Remove the power supply module before proceeding
- Check the input voltage (AC100V-AC240V) to the power supply module before connecting it
- Keep the product away from excessive humidity (refer to optimal operating temperature indicated in product specification sheet)
- Ensure that all devices connected to the product should be properly earth-grounded

In operation mode

Comply with the following instructions to prevent a fire, explosion, system failure or electric shock

- If in need of disassemble the product for service, please consult with our trained technician before proceeding
- Do not connect multiple devices to a single adapter, Exceeding the capacity may cause abnormal heat generation or fire
- Keep products away from excessive dust or flammable substances (e.g.: propane gas)

1 Overview

- Do not touch it with wet hand while powered on
- Do not insert a conductor the ventilation system
- Do not apply excessive force to unplug the power cord

Disassembly & Cleaning

- When cleaning on the surface, use a dry cloth
- Do not wipe the product using water, paint thinner or organic solvents
- Do never dismantle, repair or modify the product. Without a consulting trained technician

During installation

To prevent an accident or physical injury and to operate Product properly, please comply with the followings:

- Secure at least 18 centimeter of distance between cooling fan and wall for a proper ventilation
- Install the product on a flat surface
- Keep it away from direct sunlight or excessive heat
- Be sure to use only the standard adapter that is specified in the specification sheet. Using any other adapter could cause fire, electrical shock, or damage to the product
- Incorrectly connecting the power supply or replacing battery may cause explosion, fire, electric shock, or damage to the product

While in use

1 Overview

- Do not apply excessive force to or shake it while in use
- Only use attachments/ accessories specified by the manufacturer

2. WARNING

To reduce the risk of fire or electric shock, do not expose this product to rain or moisture.

To avoid injury, this product must be mounted securely to the floor / wall in accordance with the installation instructions.

- Use only the standard power source specified in the specification. Using a different power source can cause fire, electric shock, or damage to the product.
- Install the product firmly and reliably. Otherwise, the product may fall and personal injury may result.
- Do not block any ventilation openings, Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

1 Overview

- Do not place conductive objects (e.g. screwdrivers, coins, metal parts, etc.) or containers filled with water on top of the camera. Doing so may cause personal injury due to fire, electric shock, or falling objects
- Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus
- Do not install the product where the air conditioner is exposed to direct air. Otherwise, moisture may condense inside the product due to temperature differences inside and outside the product
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped

3. Key features

This device is based on the latest deep learning technology of intelligent video analysis which has up to 16 channels network camera video inputs. The features include object identification, object counts and object tracking by AI technology. Also, it allows to configure various trigger rules to ring alarms and can be utilized for various purposes by interworking with external network devices or systems, For example, this product can be interlocked with existing surveillance system and build an intelligent surveillance system such as business intelligence access control. It also can be used as an edge computing based video analysis device that combined with cloud web service.

- The latest deep learning technology of object recognition engine (Human, car and etc)
- Equipped rule engine to detect various situations and actions such as 'Intrusion', 'Occupancy', 'Loitering', 'Enter/Exit', 'Line Crossing'

1 Overview


- Counts the number of objects that exist in a specific zone or counts the number of objects that pass through a specific zone
- OSD is displayed on the input image and provided as standard RTSP so that it can be easily linked without major compatibility with existing interlocking systems
- Standard ONVIF protocol support enables easy integration with ONVIF based network cameras and VMS(Video Management System)
- Various I/O supports including Alarm-in, Relay, RS485, USB
- Receive up to 16 channels of network video
- Receive Full HD video up to 480 fps, 4K video up to 120fps

2 Components

1. Components



Cable clamp

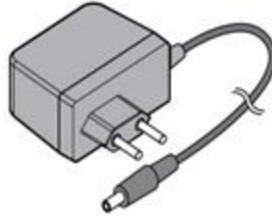





Adapter




Screw

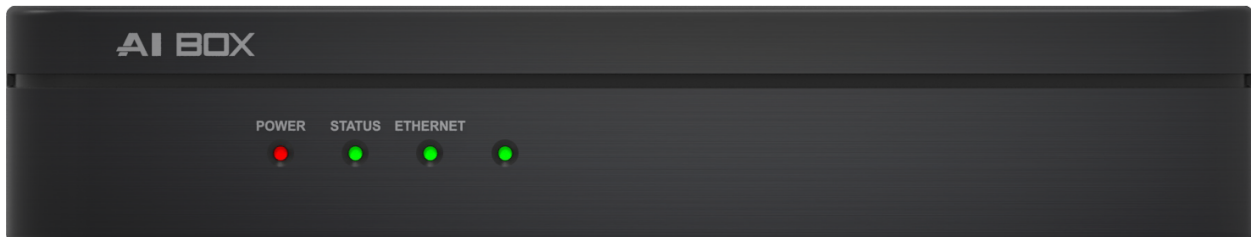2. Names and functions of front panel




List	Status sign LED	Description
POWER		Red light blinks during the boot phase and green light during operation.
STATUS		Status light blinks when an event occurs after passing the set condition.
ETH1		ETH1 light blinks when communication is take place via the ETH1 port or turns off when communication is not taking place.

2 Components


ETH2		Headlight turns on when communication is take place via the ETH2 port or turns off when communication is not taking place.
------	---	--

3.Name and functions of rear panel

- 4CH

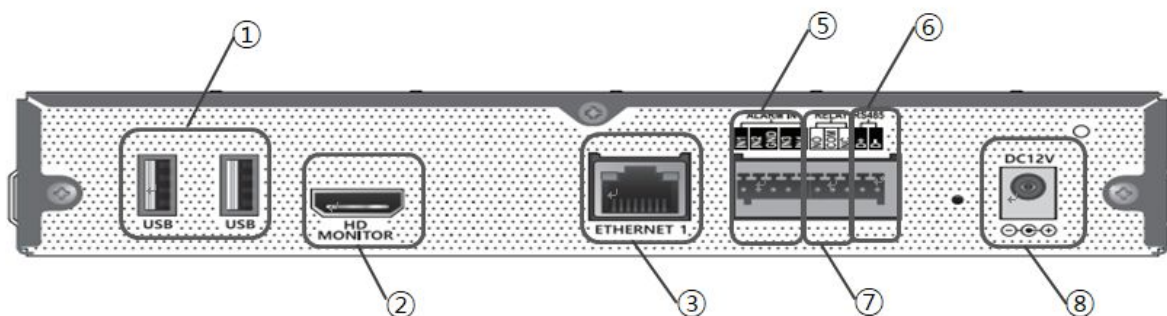

- 8CH / 16CH

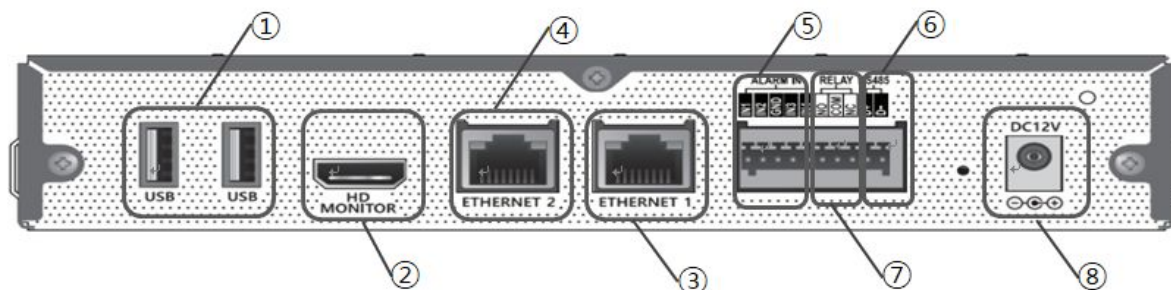


No.	Names	Description
①	USB	Universal Serial Bus (USB) ports for additional devices such as USB Mouse.
②	HD MONITOR	For connecting a monitor to view connected cameras. Note, AI Box cannot be configured locally.
③	ETHERNET 1	RJ-45 port for connecting internet and other platforms such as interoperable VMS, recorders and IP cameras.

2 Components

④	ETHERNET 2	Network port for connecting camera and other through a separate network disconnected from the outside.
⑤	ALARM IN	Alarm input signal line terminal.
⑥	REPLAY	Relay connection terminal.
⑦	RS485	RS485 communication device connection terminal.
⑧	DC12V	12V adapter plug

3 Installation

1. Basic connection configuration

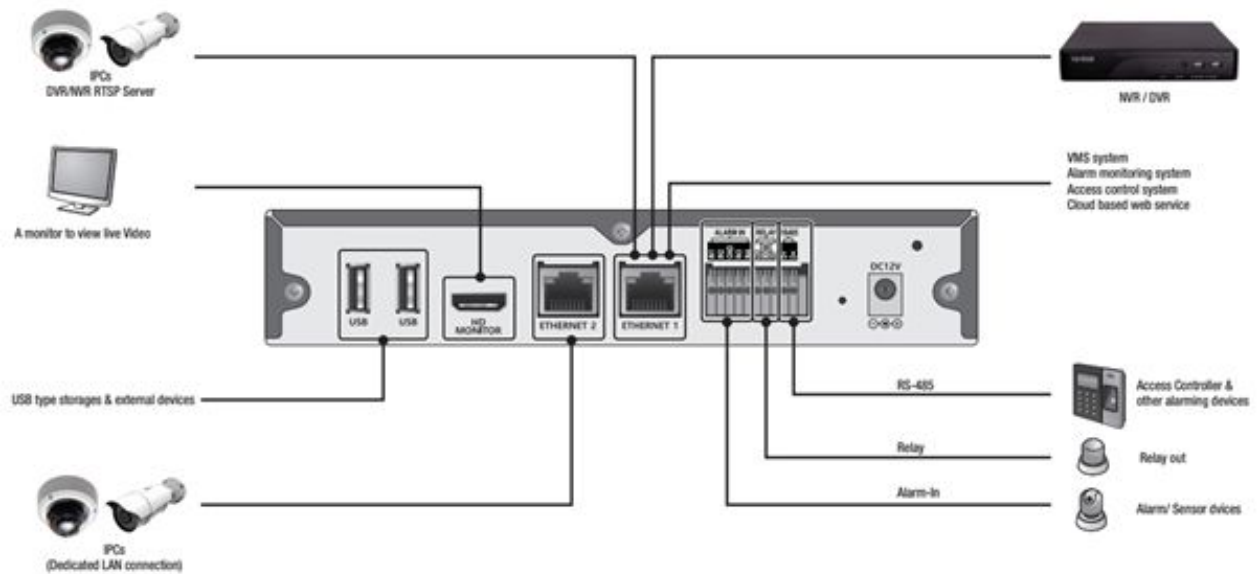

2. Network setting

- Basic requirements of Web

Name	Description
Recommended Browser	Google Chrome, FireFox, MS Edge
OS	Window / Mac / Linux
RAM	≥1GB


- Way to access the Web setting page

3 Installation

1. The factory default network setting is DHCP. Therefore, it is possible to access the IP assigned through the router supported by DHCP (IP can be checked by accessing the Web of the router).

- IP address: `https://<AI Box IP>:8443`
(e.g.: `https://10.10.10.10:8443`)
- ID: ADMIN
- Password: 1234

NOTE: Make sure to use 'https://' (Hypertext Transfer Protocol Secure)

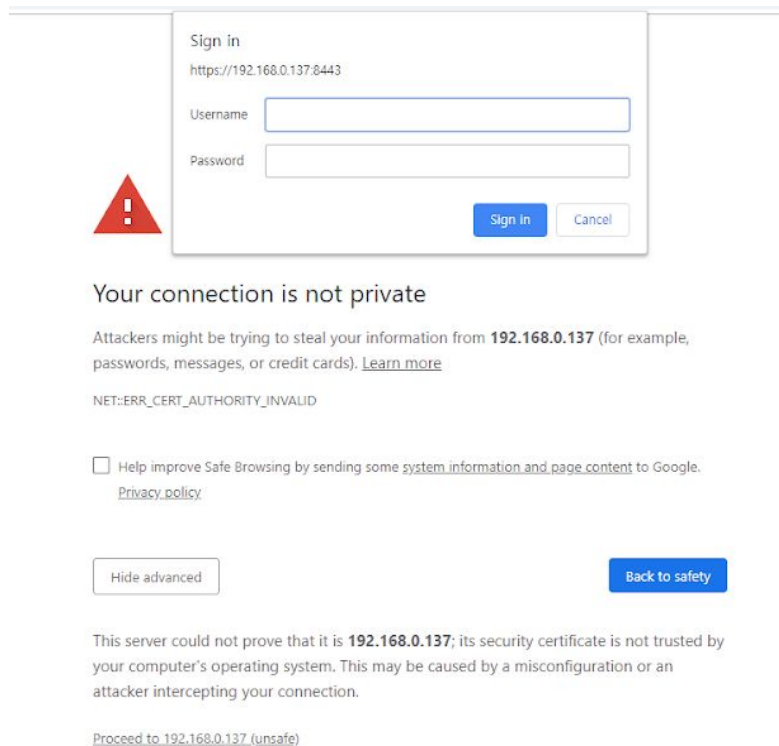

Sign in
https://192.168.0.137:8443

Username

Password

Your connection is not private

Attackers might be trying to steal your information from **192.168.0.137** (for example, passwords, messages, or credit cards). [Learn more](#)

NET:ERR_CERT_AUTHORITY_INVALID

Help improve Safe Browsing by sending some [system information and page content](#) to Google.
[Privacy policy](#)

This server could not prove that it is **192.168.0.137**; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

[Proceed to 192.168.0.137 \(unsafe\)](#)

3 Installation

2. 'Admin_Tool.exe' allows discover and configure AI BOX in the network. The tool also discovers and configures other devices such as IP cameras, NVR and DVR.

1) Click the 'Search' button to search the AI BOX connection to the network.

The screenshot shows the 'Admin Tool V4.13' window. At the top is a table with the following columns: STEP, MAC Address, Type, IP Address, HTTP Port, Model, SW Ver., Status, and Xid. Below the table are several input fields for configuration: IP Address, Subnet Mask, Gateway, Network Type (dropdown), DNS1, DNS2, ID (set to ADMIN), Password (masked with ****), and NIC Select (set to Any IPv4). There are also buttons for 'Apply', 'Search', and 'Close'. On the right side, there is a 'Set network' section with radio buttons for 'Wire' and 'Wireless(Wi-Fi)'. The status bar at the bottom left shows 'Ready' and the bottom right shows 'CAP NUM'.

- 2) The search results are displayed on the screen when search function is completed. You can determine the AI BOX from the model information and click on the product you want to set up in the list.

3 Installation

- 4) After a short period of time, the list will be updated automatically and the network configuration is completed by confirming that the settings are correct.

The screenshot shows the 'Admin Tool V4.13' window. It features a table with the following columns: STEP, MAC Address, Type, IP Address, HTTP Port, Model, SW Ver., Status, and Xid. The first row contains the following data: ID/PW MISMATCH, 00:11:5F:2A:00:05, STATIC, 192.168.200.227, 8443, AIBOX-16, SW Ver., Unreachable, and 0D05002A. Below the table are configuration fields for IP Address (192.168.200.227), Subnet Mask (255.255.255.0), Gateway (192.168.200.1), Network Type (STATIC), and NIC Select (Any IPv4). There are also DNS1 and DNS2 fields, ID (ADMIN), and Password fields. Buttons for 'Apply', 'Search', and 'Close' are present. A 'Set network' section has radio buttons for 'Wire' and 'Wireless(Wi-Fi)'. The status bar at the bottom shows 'Ready' and 'CAP NUM'.

STEP	MAC Address	Type	IP Address	HTTP Port	Model	SW Ver.	Status	Xid
ID/PW MISMATCH	00:11:5F:2A:00:05	STATIC	192.168.200.227	8443	AIBOX-16		Unreachable	0D05002A

- 5) Double click the device information in the list to open the device setting page.

⌘ Please click 'Advanced' button at the bottom and click 'Go to(unsafe)' button if you see a security warning as shown below. (Unlike a portal site that uses a public certificate, you may get a warning by using a private certificate)
Note: This is a completely safe procedure as the user is only connecting to AI BOX

3 Installation



Your connection is not private

Attackers might be trying to steal your information from **192.168.200.227** (for example, passwords, messages, or credit cards). [Learn more](#)

NET::ERR_CERT_AUTHORITY_INVALID

Help improve Chrome security by sending [URLs of some pages you visit, limited system information, and some page content](#) to Google. [Privacy policy](#)

Advanced

Back to safety



Your connection is not private

Attackers might be trying to steal your information from **192.168.200.227** (for example, passwords, messages, or credit cards). [Learn more](#)

NET::ERR_CERT_AUTHORITY_INVALID

Help improve Chrome security by sending [URLs of some pages you visit, limited system information, and some page content](#) to Google. [Privacy policy](#)

Hide advanced

Back to safety

This server could not prove that it is **192.168.200.227**; its security certificate is not trusted by your computer's operating system. This may be caused by a misconfiguration or an attacker intercepting your connection.

[Proceed to 192.168.200.227 \(unsafe\)](#)

6) Input username and password in the login window

Primary username: ADMIN

Password: 1234


The screenshot shows a login window with a light gray background. At the top, there is a white input field with the placeholder text "User ID". Below it is another white input field with the placeholder text "Password". At the bottom of the window is a blue button with the text "LOGIN" in white capital letters.

*** It is recommended to change password for safety purposes. To increase security of the device, it is recommended to change to a strong password and reset regularly.**

4 System setting

1. Network setting

Check and change the network-related settings of the device

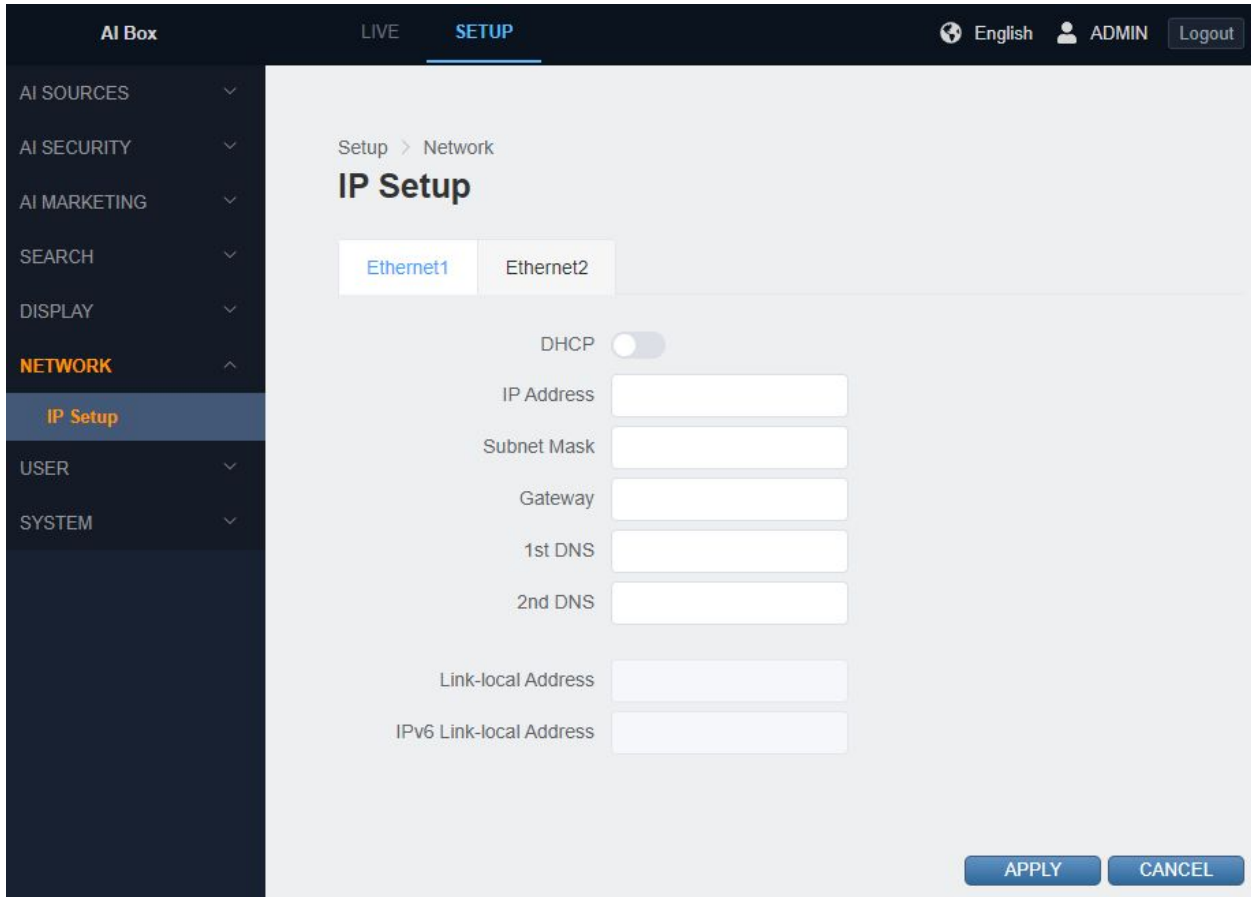

The screenshot displays the 'AI Box' management interface. The top navigation bar includes 'AI Box', 'LIVE', and 'SETUP' (highlighted). On the right, there are links for 'English', 'ADMIN', and 'Logout'. A left sidebar menu lists various settings: AI SOURCES, AI SECURITY, AI MARKETING, SEARCH, DISPLAY, NETWORK (highlighted), IP Setup (highlighted), USER, and SYSTEM. The main content area shows the 'Setup > Network' path and the 'IP Setup' title. Two tabs, 'Ethernet1' and 'Ethernet2', are visible, with 'Ethernet1' selected. A 'DHCP' toggle switch is currently turned off. Below it are input fields for 'IP Address', 'Subnet Mask', 'Gateway', '1st DNS', '2nd DNS', 'Link-local Address', and 'IPv6 Link-local Address'. At the bottom right, there are 'APPLY' and 'CANCEL' buttons.

Ethernet1, Ethernet2 means Ethernet port on the back of the device to which a network cable is connected

- **Automatic IP address allocation**

Enable or disable the Dynamic Host Configuration Protocol (DHCP) server. DHCP automatically assigns an IP address to the device if there is a DHCP server on the network.


4 System setting

- Link local address

It is an IP address automatically assigned to communicate with other devices in the broadcast domain and cannot be changed. NOTE: Link Local Addresses are not supported for DNS.

2. Change user password

Use the Users & User Management page to create and manage user accounts and to change the way the AI BOX manages the user settings.

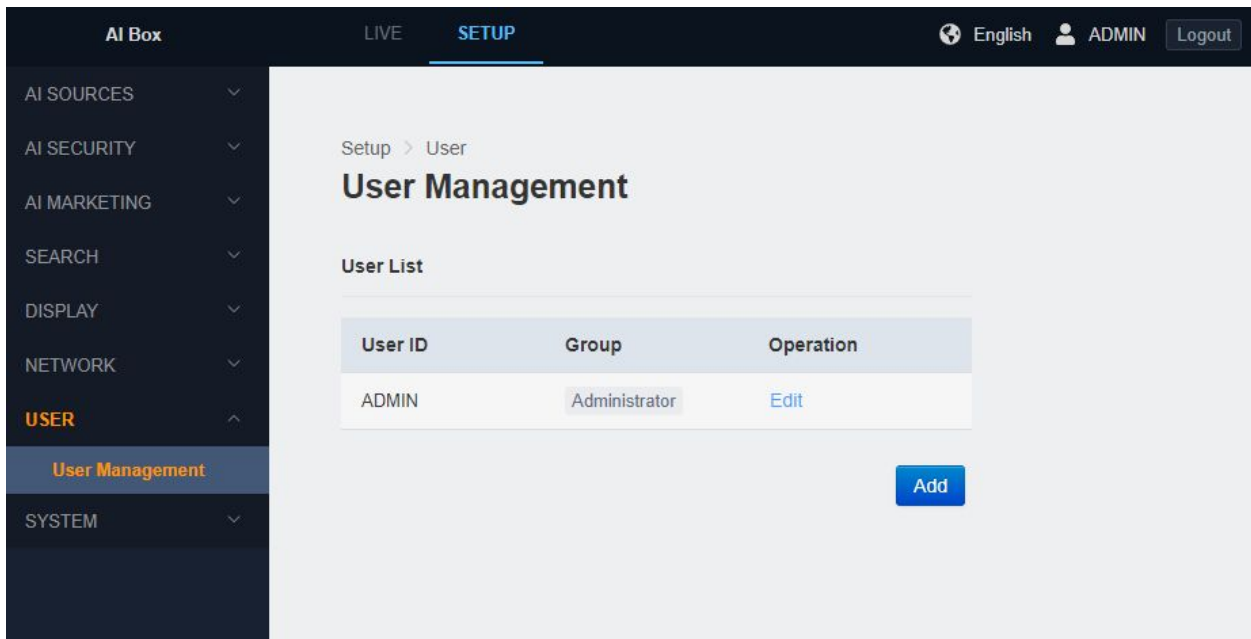

The screenshot shows the AI Box web interface. The top navigation bar includes 'AI Box', 'LIVE', 'SETUP', 'English', 'ADMIN', and 'Logout'. The left sidebar lists various settings categories: AI SOURCES, AI SECURITY, AI MARKETING, SEARCH, DISPLAY, NETWORK, USER (highlighted), User Management (highlighted), and SYSTEM. The main content area is titled 'User Management' and shows a 'User List' table with one entry: ADMIN (Group: Administrator, Operation: Edit). An 'Add' button is located at the bottom right of the table.

User ID	Group	Operation
ADMIN	Administrator	Edit

4 System setting

Setup > User

User Management

Edit User

User ID

Group

Old Password

Password

Confirm Password

User accounts are created to limit the permissions of individuals who are logged onto the camera. The User Management page also includes four predefined access level settings that include Administrators, Managers, Operators, and Viewers permissions.


- Edit window of use information will pop-up if you press the 'Edit' button.
- Input your current password and new password then press the 'APPLY' button.
 - ✓ Current password: Input the current password for user account
 - ✓ New password: Input new password
 - ✓ New password Confirm: Input new password once more
- Press the 'APPLY' button to change your password.

4 System setting

- You need to log in again with your new password if you change the password.

3. Language setting

Set the language which will be displayed on the system.

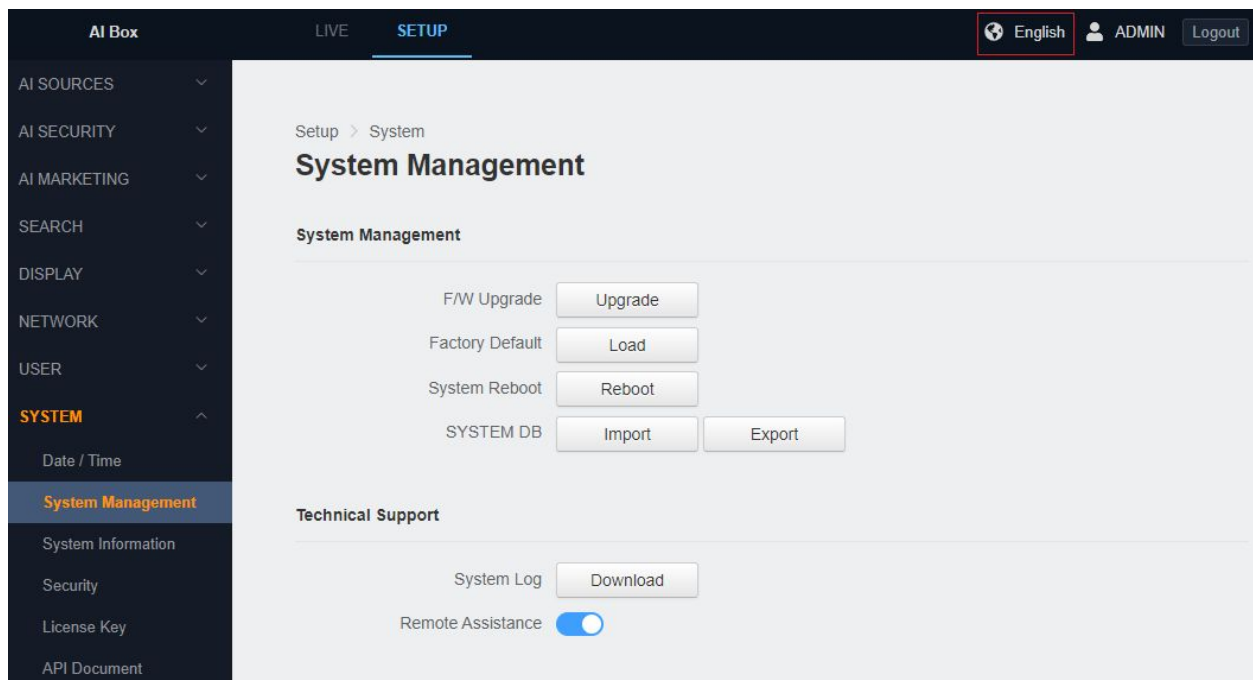

4. Date and Time setting

Set the system date and time.

- Date / Time

4 System setting

The date and time set on the device are displayed. Change the date and time by pressing the button with the date and time displayed

- **Network Time server setting**

- Time server: Input the address of NTP server. Pressing the 'SYNC' button will communicate with the NTP server information provided to automatically synchronized to change the system date and time.

⌘ The DNS address of the device must be set correctly if the address of NPT server is a domain.

- Auto Sync: Select whether to synchronize the time periodically through the NTP server.

The screenshot shows the 'Date / Time' configuration page in the AI Box system settings. The page is titled 'Date / Time' and is part of the 'System' setup. It is divided into three main sections: 'Date Time Setup', 'Network Time Server Setup', and 'Timezone / DST'. The 'Date Time Setup' section includes fields for 'Date Time' (12/23/2019 17:17:47), 'Date Format' (MM/DD/YYYY), and 'Time Format' (24 HOUR). The 'Network Time Server Setup' section includes a 'Time Server' field (pool.ntp.org) with a 'SYNC' button, and an 'Auto Time Sync' dropdown menu set to 'ON'. The 'Timezone / DST' section includes a 'Timezone' dropdown menu set to 'GMT+09:00 Asia/Seoul' and a 'DST' dropdown menu set to 'ON'. At the bottom right, there are 'APPLY' and 'CANCEL' buttons. The left sidebar shows the navigation menu with 'SYSTEM' expanded and 'Date / Time' selected. The top navigation bar shows 'AI Box', 'LIVE', 'SETUP', 'English', 'ADMIN', and 'Logout'.


- **Time zone / DST**

4 System setting

- Time zone: Select your timezone.
- DST: Choose whether to use daylight saving time.


5. Firmware upgrade

Upgrade device's firmware.

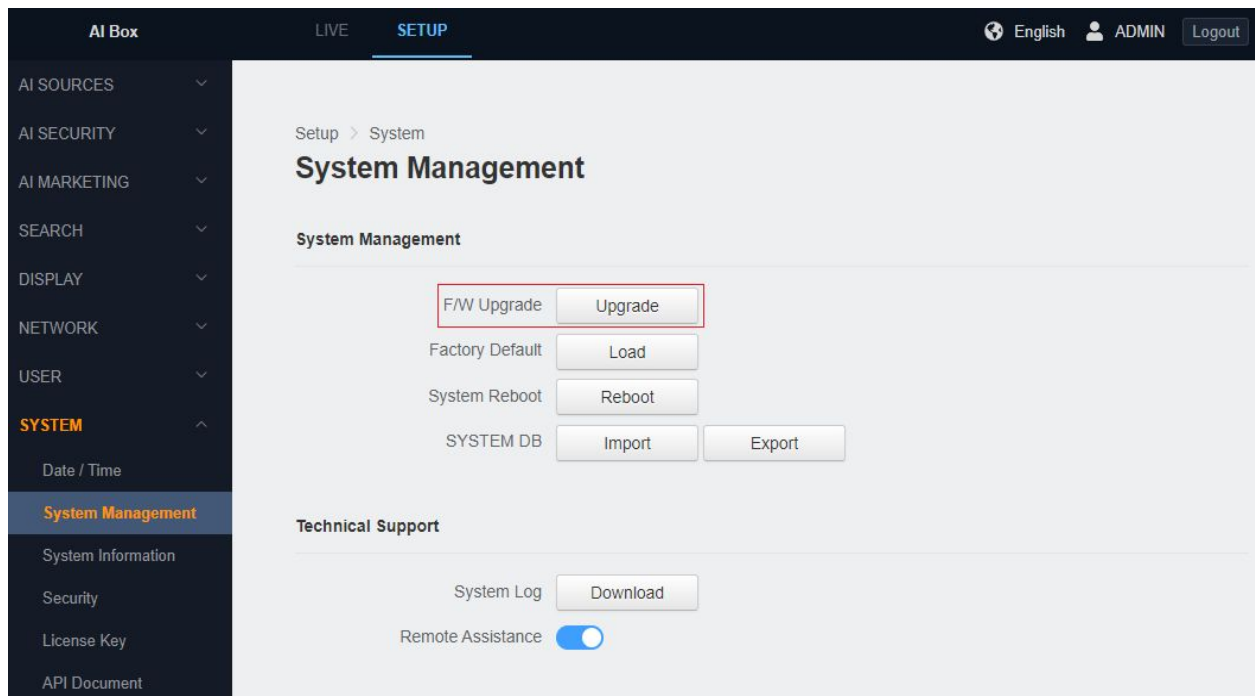

The screenshot displays the 'System Management' page in a web interface. The top navigation bar includes 'AI Box', 'LIVE', and 'SETUP' (highlighted), along with language ('English'), user ('ADMIN'), and 'Logout' options. A left sidebar lists various system categories, with 'SYSTEM' expanded to show 'Date / Time', 'System Management' (highlighted), 'System Information', 'Security', 'License Key', and 'API Document'. The main content area shows the breadcrumb 'Setup > System' and the title 'System Management'. Under the 'System Management' heading, there are several actions: 'F/W Upgrade' (highlighted with a red box) with an 'Upgrade' button, 'Factory Default' with a 'Load' button, 'System Reboot' with a 'Reboot' button, and 'SYSTEM DB' with 'Import' and 'Export' buttons. Below this, the 'Technical Support' section includes 'System Log' with a 'Download' button and 'Remote Assistance' with a blue toggle switch.

4 System setting

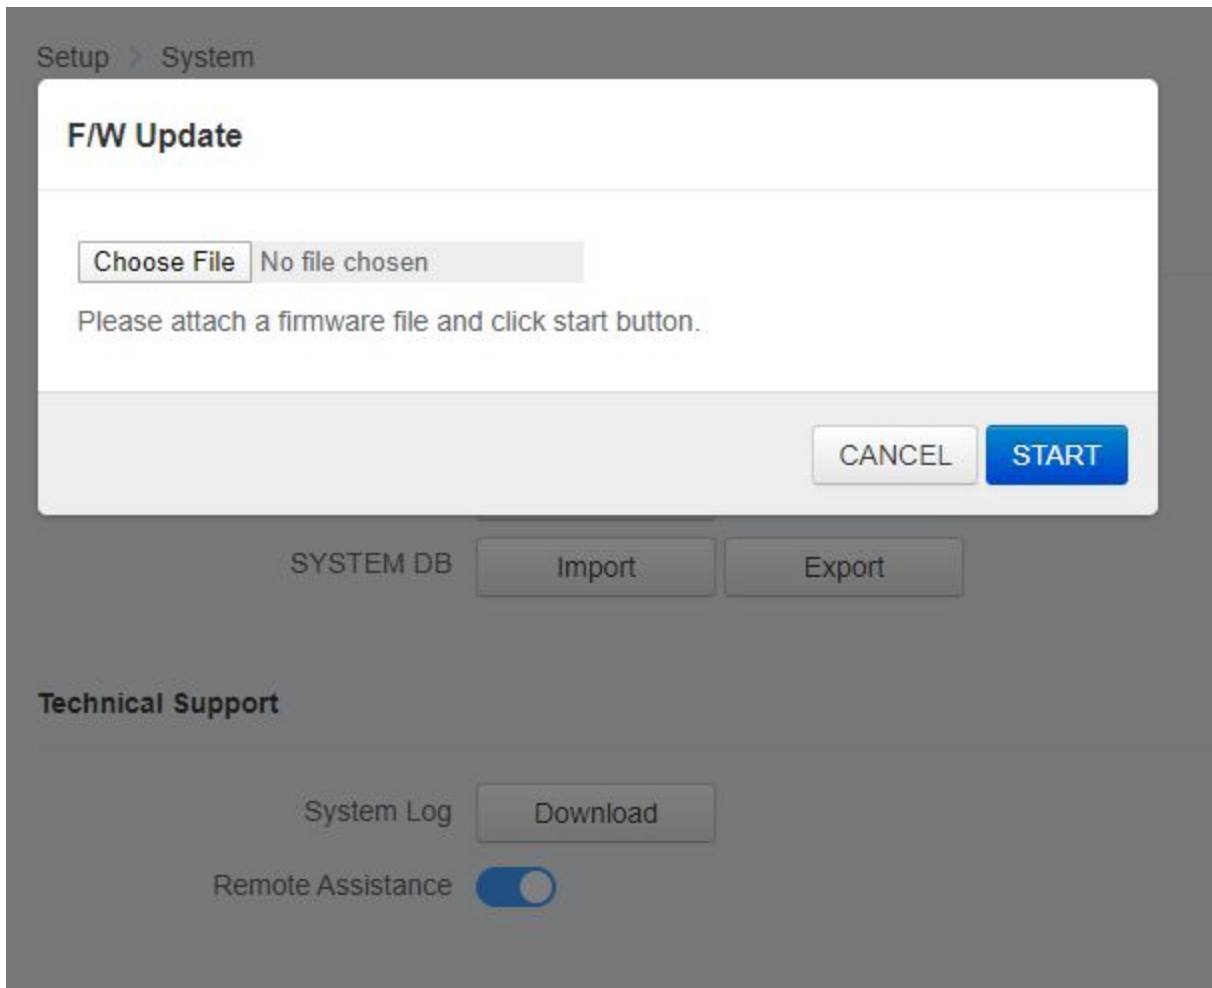

Users can update system firmware if available. All AI BOX functions will shut down during firmware update. Please close any other screens before firmware update. Never disconnect power or LAN cable during the firmware update process. It takes approximately 3-10 minutes for the unit to reboot after firmware update process. NOTE: power cannot be lost when updating firmware since it will cause the update failure and manufacturer maintenance will be required.


- Press the 'Upgrade' button and a firmware upgrade popup will appear
- Attach the firmware file (*.bin) to upgrade
- Press the 'Start' button to start the firmware upgrade
- The device will reboot when the firmware upgrade is complete

※ Please do not operate the device during the firmware upgrade.

4 System setting

6.Factory default

Reset your device's settings to factory default settings.

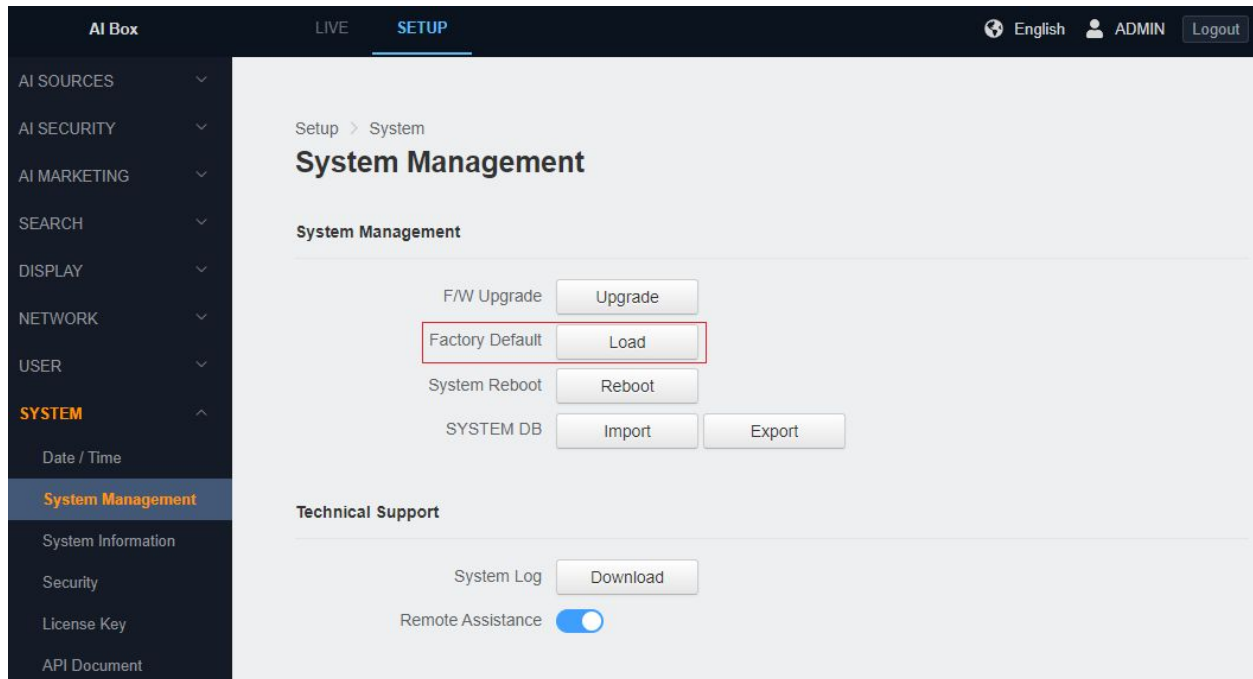

- Press the 'OK' button to bring up the factory reset popup.
- The network-related settings will not be reset if you select the 'Network settings remain current' option.
- Click 'OK' button to start factory default.
- The device will reboot when the factory default is complete.

[CAUTION] If the AI BOX is not connected to a Dynamic Host Configuration Protocol (DHCP) network, the IP address settings for the AI BOX will be lost and the server will not recognize the camera. DHCP On is the default setting for the AI BOX IP address

5 AI Source & Annotated Live Video

1. Video Source setting

Connect video from a server or device that supports IP cameras or RTSP streaming and configure the default AI algorithm to assign to each video channel

[CAUTION] Video resolution can be connected up to a maximum channel of 2M pixels 30 fps. In other words, you should connect the cable at a lower fps to 7 fps or less to connect all channels when connecting a 4K camera.

AI Box LIVE SETUP English ADMIN Logout

AI SOURCES

- Video Source
- Face Recognition
- False Alarm Filter

AI SECURITY

AI MARKETING

SEARCH

DISPLAY

NETWORK

USER

SYSTEM

Setup > AI Sources

Video Source

Discovery AI Algorithm 480 / 2000 ?


CH	NAME	URL	Discovery	TCP	AI Algorithm
1	1	rtsp://ADMIN:*****@192.168.200.226:554/live/ma		TCP	Human / Vehicle - Normal (F)
2		rtsp://username:password@ip.port/url		TCP	None
3		rtsp://username:password@ip.port/url		TCP	None
4		rtsp://username:password@ip.port/url		TCP	None
5		rtsp://username:password@ip.port/url		TCP	None
6		rtsp://username:password@ip.port/url		TCP	None
7		rtsp://username:password@ip.port/url		TCP	None
8		rtsp://username:password@ip.port/url		TCP	None
9		rtsp://username:password@ip.port/url		TCP	None
10		rtsp://username:password@ip.port/url		TCP	None
11		rtsp://username:password@ip.port/url		TCP	None
12		rtsp://username:password@ip.port/url		TCP	None
13		rtsp://username:password@ip.port/url		TCP	None
14		rtsp://username:password@ip.port/url		TCP	None
15		rtsp://username:password@ip.port/url		TCP	None
16		rtsp://username:password@ip.port/url		TCP	None

APPLY CANCEL

5 AI Source & Annotated Live Video

- IP camera / DVR / NVR connection using ONVIF discovery protocol

Video stream address can be configured by searching ONVIF devices connected to the local network.

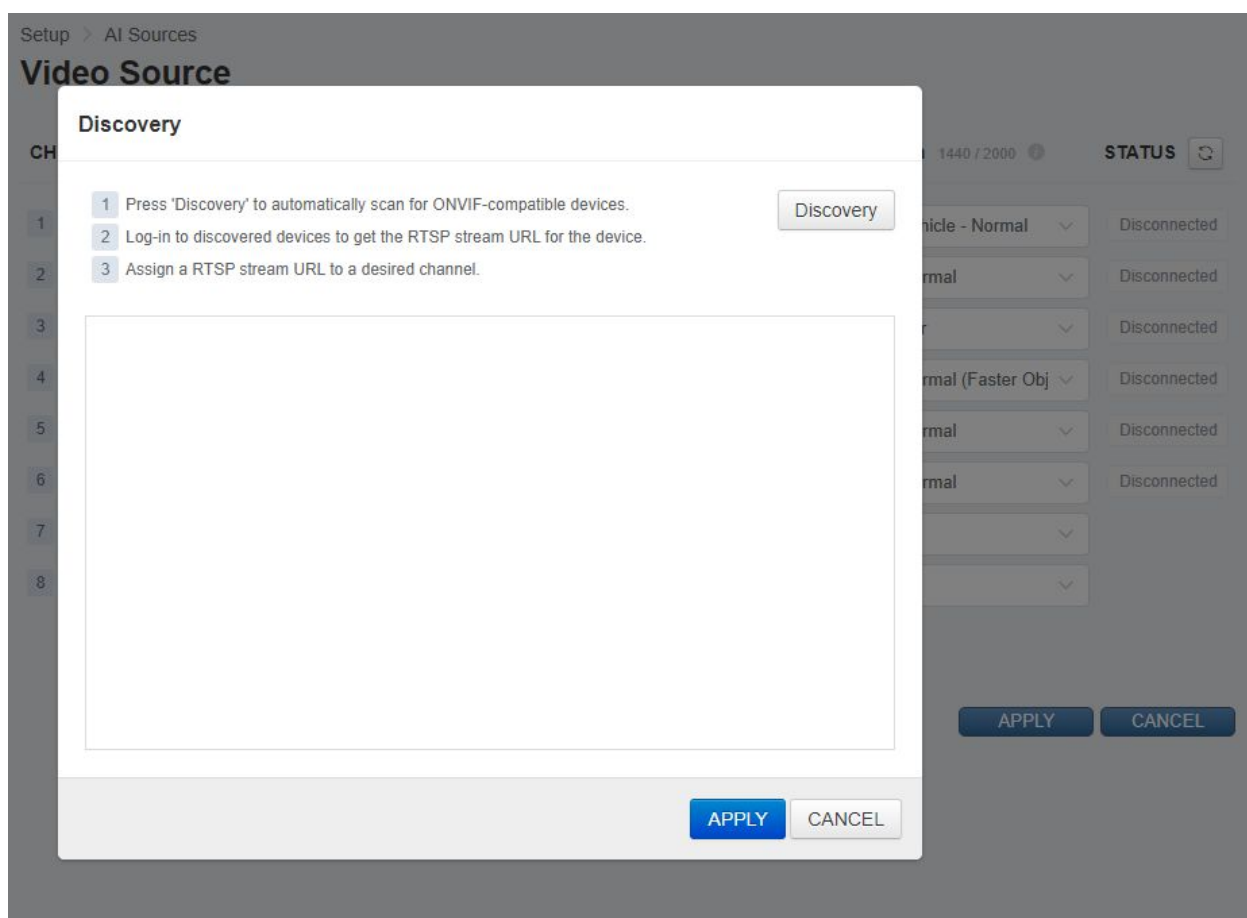

- Press the 'Discovery' button and the ONVIF Discovery popup will appear.
- Press the 'Discovery' button to search ONVIF devices connected to the local network.
- Input the account information of the device found and press the <Login> button to view the video stream address.
- Assign the video stream address of the ONVIF device to a specific channel.
- The video stream address is inputted in the URL field of the assigned channel when you press the 'APPLY' button.

5 AI Source & Annotated Live Video

- **Connection via manual entry of RTSP address**

Connection can be made by directly entering the RTSP address of a device or server that supports standard TCP based RTSP.

- **DVR / NVR auto connection through Plug & Play**

By using a dedicated DVR / NVR supports AI Box Plug & Play, you can connect AI Box automatically through the menu of DVR / NVR without device setting through AI Box's Web UI. (Please refer to the dedicated DVR / NVR user guide for details.)

2. AI algorithm

Set a basic AI algorithm for each video source analysis. Various algorithms can be selected according to the object, distance and purpose to be analyzed. Choosing a particular algorithm can be reduced the number of channels you can support because each algorithm has a different throughput. For example, selecting AI algorithm that requires higher resources from AI BOX, the maximum channel will be reduced.

The default installed algorithm is as follows:

- **Human / Vehicle - Mid**

The algorithm detects medium distance of people and vehicle.

- **Human / Vehicle - Far**

The algorithm is optimized to distinguish people and object in the far distance.

- **Human / Vehicle - Mid (High Speed)**

5 AI Source & Annotated Live Video

The algorithm is optimized to track fast moving people and vehicle. It can be used when you want to detect fast moving objects more accurately through rules such as 'Line Crossing' or 'Enter / Exit'.

The minimum object recognition size compared to the input screen for each algorithm is as follows:

- ✓ Minimum detectable object size of Intrusion and Occupancy.

	Person		Vehicle	
	width	height	width	height
Human/Vehicle Far	1.00%	3.00%	2.00%	1.50%
Human/Vehicle Mid	1.25%	4.50%	3.00%	2.25%

- ✓ Minimum detectable object size of Loitering, Enter / Exit and Line Crossing

	Person		Vehicle	
	width	height	width	height
Human/Vehicle Far	1.25%	5.00%	3.00%	2.50%
Human/Vehicle Mid	2.00%	6.00%	7.00%	6.00%

3. False detection filter setting


- Static Object Exclusion Zone

5 AI Source & Annotated Live Video

It is possible to specify the area to force exclusion by randomly processing static objects that are erroneous. For example, if a mannequin or a container box is known as a person or a car to be detected, this function can be forcibly excluded.

[Caution] The judgment of whether the object to be detected is within the static object exclusion area is based on the object's center coordinate. Therefore, specifying only the smallest size of the excluded area (as much as it covers the center of the object you want to exclude) can reduce the error that excludes even the actual object to be detected.

(In order to exclude the detected box as follows, only the center of the object should be minimized, not covering the entire box.)

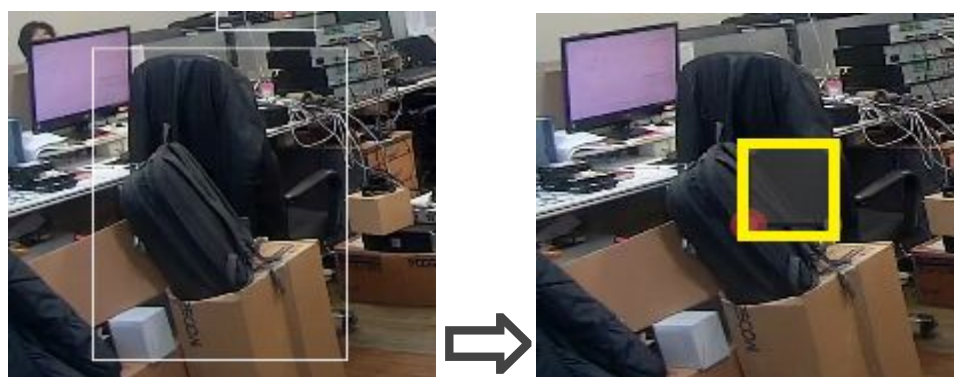

4. Face Recognition

See P.00 for more information on face detection settings.

5. Annotated Live Video

- Live screen composition
 - Go to the live or setting page.
 - Select multi-view or a specific channel (Multi-view is the same as the HDMI output screen).
 - Annotated video stream of the selected channel is played.

5 AI Source & Annotated Live Video

- The Annotated video stream address (RTSP URL) of the selected channel is displayed. You can view videos with information drawn directly in standard RTSP viewers such as VLC players.

⌘ What is Annotated video stream?

Video stream with tracked object detection box, set zone and AI trigger widget on OSD.


- **Show object bounding box**

- Grey: Objects in a static state.
- White: Objects in dynamic state.
- Purple: The object where the event occurred. (Appears for a few seconds after the event)

6 Action Rules

1. Action Rule Overview


Action Rule is composed of Trigger, Condition and Action. After Action Rule is set, it operates by checking Condition when Trigger occurs and performing Action if satisfied.

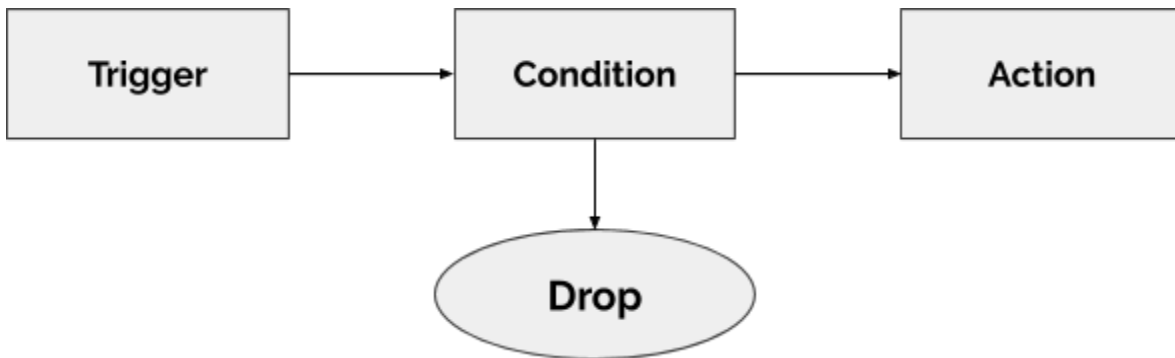

< Action Rule composition >

- There are 2 types of trigger, AI Trigger and System Trigger. An event discovered by AI in AI Box generates an AI Trigger. Events detected by system sensors such as sensor state changes trigger a System Trigger. Both kinds of triggers can be triggers for Action Rules.
- Condition is the filter component for the trigger. Typically, Schedule condition is to set filter condition by time component.
- The Action defines the action to be performed when Trigger event occurs and Condition is met. It can define and perform various types of actions, including exporting alarm outputs or sending their events to the ONVIF Metadata Stream.

6 Action Rules

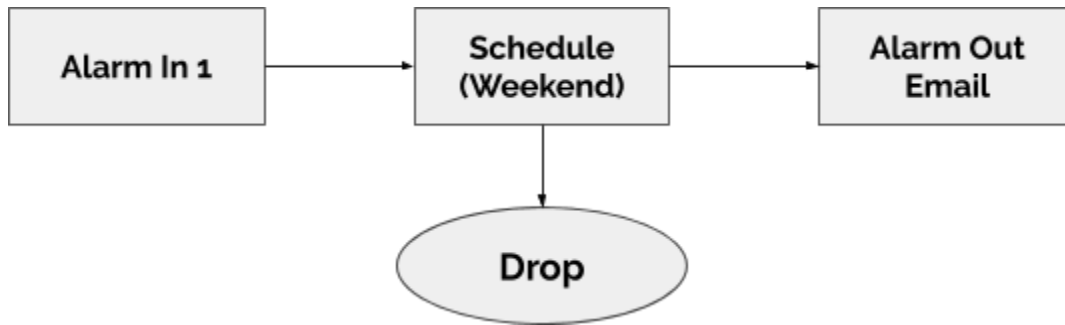

< Action Rule example >

2. AI Trigger setting

- Intrusion

Intrusion is a function that is triggered when a new target appears in the area from the ROI set zone on the screen ([Caution] The determination of whether an object is inside a section is based on the center coordinates of the object.)

Setup > AI Security

AI Trigger

[Intrusion](#) [Occupancy](#) [Loitering](#) [Stopping](#) [Enter/Exit](#) [Line Crossing](#) [LPR](#)

Intrusion preset

Channel	Video Name	No	Name	Target Object	Intrusion Label	Operation
CH 2	Gender	1	12	person	Intrusion	Edit Delete
CH 5	Snow	2	test1	person	Human cross	Edit Delete

[Add](#)

6 Action Rules

- 1) In the SETUP application tab, enter the AI Trigger menu under the 'Action Rules' menu.
- 2) Click the Intrusion tab.
- 3) Click the 'Add' button at the bottom.

The screenshot shows the 'AI Trigger' configuration window. At the top, there is a breadcrumb 'Setup > AI Security' and the title 'AI Trigger'. Below the title is a horizontal menu with tabs: 'Intrusion' (selected), 'Occupancy', 'Loitering', 'Stopping', 'Enter/Exit', 'Line Crossing', and 'LPR'. Under the 'Intrusion' tab, the section 'Intrusion preset' is visible. It contains a form with the following fields: 'Name' (text input with placeholder 'Trigger preset name'), 'Video Source' (dropdown menu with 'Select'), and 'Target Object' (dropdown menu with 'Select'). Below these are two checkboxes: 'Ignore Duplicate Event' and 'Advanced Setup', both currently unchecked. A note below the 'Ignore Duplicate Event' checkbox reads 'Sends intrusion events for each objects.' At the bottom right of the form area are two buttons: 'APPLY' and 'CLOSE'.

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class.

It is possible to select multiple objects for detection.

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

6 Action Rules

- 7) Ignore Duplicate Events is an option to ignore event occurrences when an intrusion of another object following an intrusion state occurs.

When the 'check' is enabled, only the first object that breaks into the zone will raise an event. (Intrusion must occur again when all objects are disappeared in a zone before new events occur.)

- 8) The reminder alarm interval is an event frequency setting to remind the user again if the intrusion continues. (Only works when Ignore Duplicate Event is activated)

- 9) Checking the Advanced Settings displays additional setting items.

The screenshot shows the 'AI Trigger' configuration page. At the top, there is a breadcrumb 'Setup > AI Security' and the title 'AI Trigger'. Below the title is a horizontal menu with tabs for 'Intrusion', 'Occupancy', 'Loitering', 'Stopping', 'Enter/Exit', 'Line Crossing', and 'LPR'. The 'Intrusion' tab is selected. Underneath, there is a section titled 'Intrusion preset'. The main configuration area contains several fields: 'Name' with a text input 'Trigger preset name'; 'Video Source' with a dropdown menu 'Select'; 'Target Object' with a dropdown menu 'Select'; 'Ignore Duplicate Event' with a checked checkbox; a sub-section 'Does not send intrusion events on the following objects.'; 'Reminder Duration' with a dropdown menu '5 minute(s)'; 'Advanced Setup' with a checked checkbox; 'Intrusion Label' with a text input 'Rename Label'; 'Count Reset' with a dropdown menu 'OFF' and a 'RESET' button; and 'Ignore Static Object' with a dropdown menu 'OFF'. At the bottom right, there are two buttons: 'APPLY' and 'CLOSE'.

- 10) Intrusion Label entry allows you to set the counter name of the widget.

6 Action Rules

11) Counter Reset lets you set the time to reset the widget's counter.

You can also reset manually by pressing the Reset button.

12) It will ignore objects that are not moving if the Ignore Static Object is enabled.

(An event may occur if there is no movement and then you move again.)

13) Set ROI zone

Move the entire ROI by dragging its zone.

Move the edge by dragging the edge of the ROI.

Click on the line of the ROI to create a new edge.

Right click the edge of ROI to delete the edge.

14) Drag the Widget rectangle in the upper right corner to set where the widget will appear.



6 Action Rules

- 15) Click the 'APPLY' button at the bottom to save.
- 16) The Widget will display properly if the trigger is added.
- 17) After confirming the settings, click the 'CLOSE' button at the bottom to check the list.

- **Occupancy**

Occupancy is an item that is triggered when you set an area on the screen and the number of detection targets in the area is out of the specified range. For example, an alarm can be triggered if a car that must be parked in a designated area has disappeared, or if more than two people are entering an area that can only accommodate two people.

[Caution] The determination of whether an object is inside a section is based on the center coordinates of the object.

The screenshot displays the 'AI Trigger' configuration page. The left sidebar contains a menu with 'AI SECURITY' expanded to show 'Action Rules' and 'AI Trigger' (highlighted). The main area shows the 'Occupancy' tab selected. Below the tabs, there is a table for 'Occupancy preset' with columns: Channel, Video Name, No, Name, Target Object, Count, and Operation. The table is currently empty, showing 'No Data'. An 'Add' button is located at the bottom right of the page.

6 Action Rules

- 1) In the 'SETUP' application tab, enter the AI Trigger menu under the 'Action Rules' menu.
- 2) Click the 'Occupancy' tab.
- 3) Click the 'Add' button at the bottom.

The screenshot shows the 'AI Trigger' configuration window. At the top, there is a breadcrumb 'Setup > AI Security' and the title 'AI Trigger'. Below the title is a horizontal tab bar with options: 'Intrusion', 'Occupancy' (selected), 'Loitering', 'Stopping', 'Enter/Exit', 'Line Crossing', and 'LPR'. Underneath the tabs is the section 'Occupancy preset'. The main configuration area contains the following fields and controls:

- Name:** A text input field containing 'Trigger preset name'.
- Video Source:** A dropdown menu with 'Select' and a downward arrow.
- Target Object:** A dropdown menu with 'Select' and a downward arrow.
- Trigger Method:** A dropdown menu with 'Limits' and a downward arrow.
- Fewer than:** A control with a minus button, the number '0', and a plus button.
- More than:** A control with a minus button, the number '1', and a plus button.
- Help text:** 'Trigger an event when the number of objects over or under the limits.'
- Advanced Setup:** A checkbox that is currently unchecked.

At the bottom right of the window are two blue buttons: 'APPLY' and 'CLOSE'.

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class.

It is possible to select multiple objects for detection.

6 Action Rules

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

- 7) Set the 'More than'. It will trigger when the number of detection targets exceeds the set number.
- 8) After the 'Fewer than' is set, it will trigger if the number of targets to be detected is less than the set number.
- 9) Show additional settings when you check for the 'Advanced Setup'.

Setup > AI Security

AI Trigger

Intrusion **Occupancy** Loitering Stopping Enter/Exit Line Crossing LPR

Occupancy preset

Name	<input type="text" value="Trigger preset name"/>
Video Source	<input type="text" value="Select"/>
Target Object	<input type="text" value="Select"/>
Trigger Method	<input type="text" value="Limits"/>
Fewer than	<input type="text" value="0"/>
More than	<input type="text" value="1"/>


Trigger an event when the number of objects over or under the limits.

Advanced Setup

Num Objects Label	<input type="text" value="Num Objects"/>
Fewer Than Label	<input type="text" value="Fewer Than 0"/>
More Than Label	<input type="text" value="More Than 1"/>
Count Reset	<input type="text" value="OFF"/> <input type="button" value="RESET"/>
Ignore Static Object	<input type="text" value="OFF"/>

6 Action Rules

- 10) 'Count Reset' allows you to set the time to reset the widget's count. You can also reset manually by pressing the 'RESET' button.
- 11) It will ignore objects that are not moving if the 'Ignore Static Object' is enabled. (Only objects that are currently moving are included in the count.)

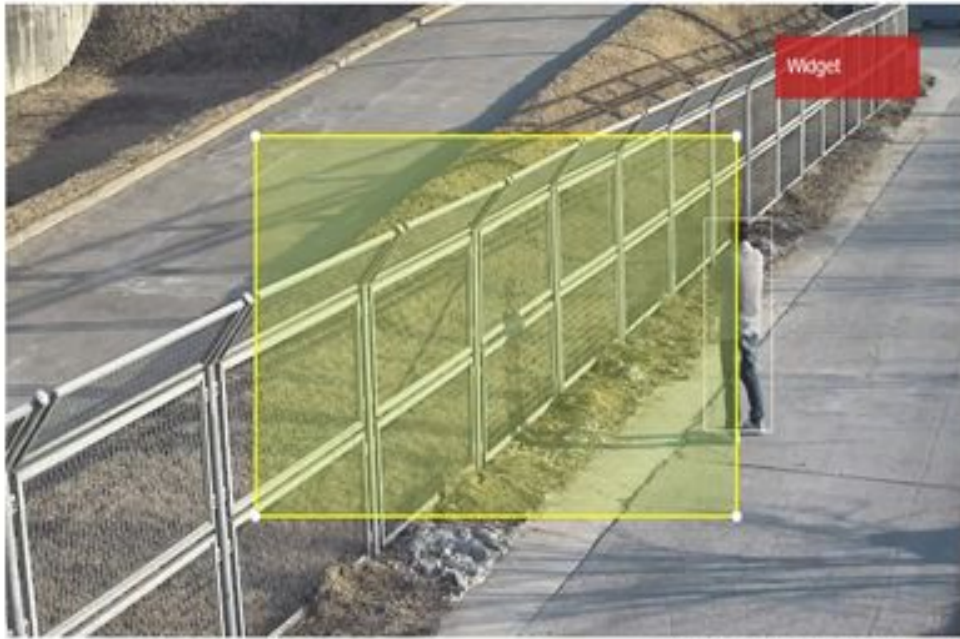

rtsp://ADMIN:****@172.17.0.162:5554/veich16

12) Set ROI zone

Move the entire ROI by dragging its zone.


Move the edge by dragging the edge of the ROI.

Click on the line of the ROI to create a new edge.

Right click the edge of ROI to delete the edge.

13) Drag the Widget rectangle in the upper right corner to set where the widget will appear.

6 Action Rules

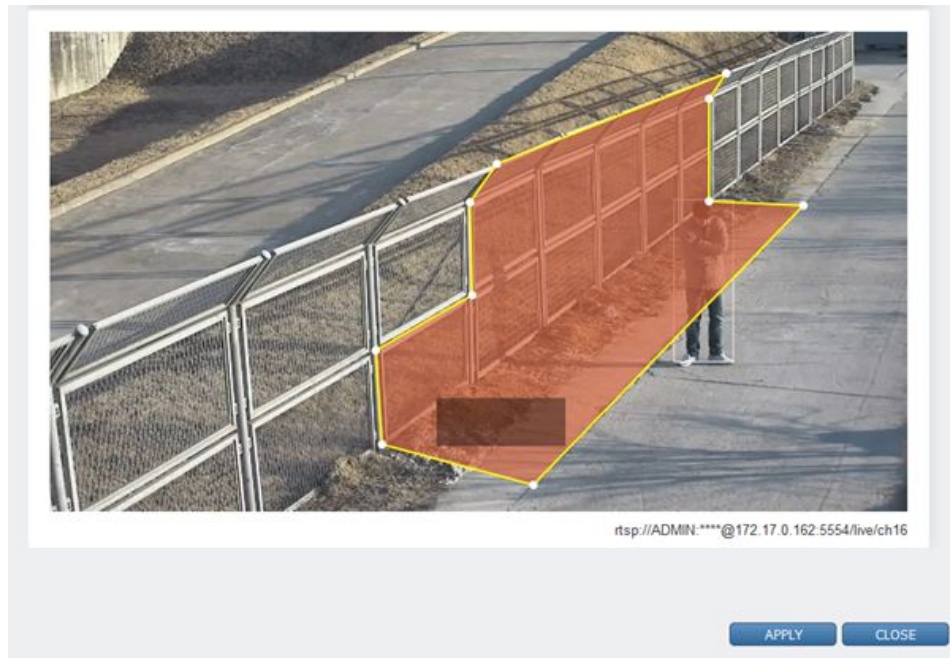


- 14) Click the 'APPLY' button at the bottom to save.
- 15) The Widget will display properly if the trigger is added.
- 16) After confirming the settings, click the 'CLOSE' button at the bottom to check the list.

- **Loitering**

Loitering is a function that is triggered when the detection target stays in the area for a certain period of time from the ROI set zone on the screen. For example, triggers an event when a person has been hanging around in a certain area for the preset period of time. ([Caution] The determination of whether an object is inside a section is based on the center coordinates of the object.)

6 Action Rules

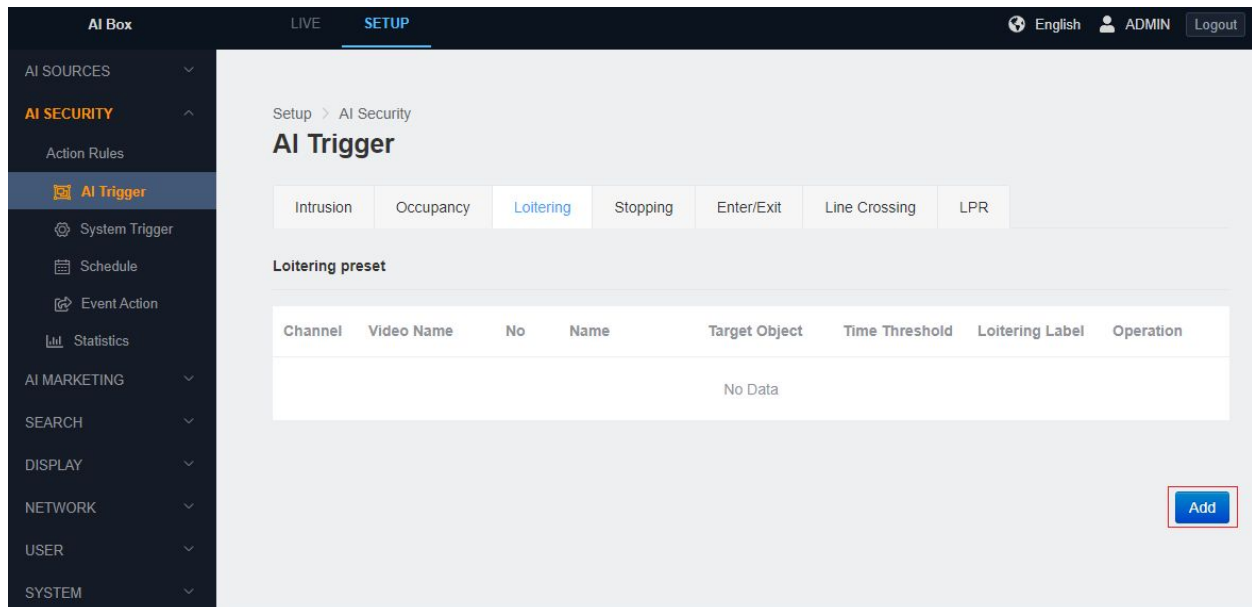

- 1) In the 'SETUP' application tab, enter the AI Trigger menu under the 'Action Rules' menu.
- 2) Click Loitering tab.
- 3) Click the 'Add' button at the bottom.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion | Occupancy | **Loitering** | Stopping | Enter/Exit | Line Crossing | LPR

Loitering preset

Name

Video Source

Target Object

Dwell Time second(s)

Maximum time threshold to judge

Advanced Setup

APPLY CLOSE

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class.

It is possible to select multiple objects for detection.

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

- 7) Set the 'Dwell Time'. Triggered when detection target stays longer than set time.
- 8) Show additional settings when you check for the 'Advanced Setup'.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion | Occupancy | **Loitering** | Stopping | Enter/Exit | Line Crossing | LPR

Loitering preset

Name

Video Source

Target Object

Dwell Time 10 second(s)
Maximum time threshold to judge

Advanced Setup

Loitering Label

Count Reset

- 9) 'Loitering Label' allows you to set the count name of the widget.
- 10) 'Count Reset' allows you to set the time to reset the widget's count. You can also reset manually by pressing the 'RESET' button.
- 11) It will ignore objects that are not moving if the 'Ignore Static Object' is enabled.

6 Action Rules



12) Set ROI zone.

Move the entire ROI by dragging its zone.

Move the edge by dragging the edge of the ROI.

Click on the line of the ROI to create a new edge.

Right click the edge of ROI to delete the edge.

13) Drag the Widget rectangle in the upper right corner to set where the widget will appear.




6 Action Rules

- 14) Click the 'APPLY' button at the bottom to save
- 15) The Widget will display properly if the trigger is added
- 16) After confirming the settings, click the 'CLOSE' button at the bottom to check the list.

- **Stopping**

Stopping is a function that is triggered when the object stays in the area without movement on the ROI set zone on the screen. For example, it can be used to trigger an event when a car has been parked for a certain time in a certain area. ([Caution] The determination of whether an object is inside a section is based on the center coordinates of the object.)

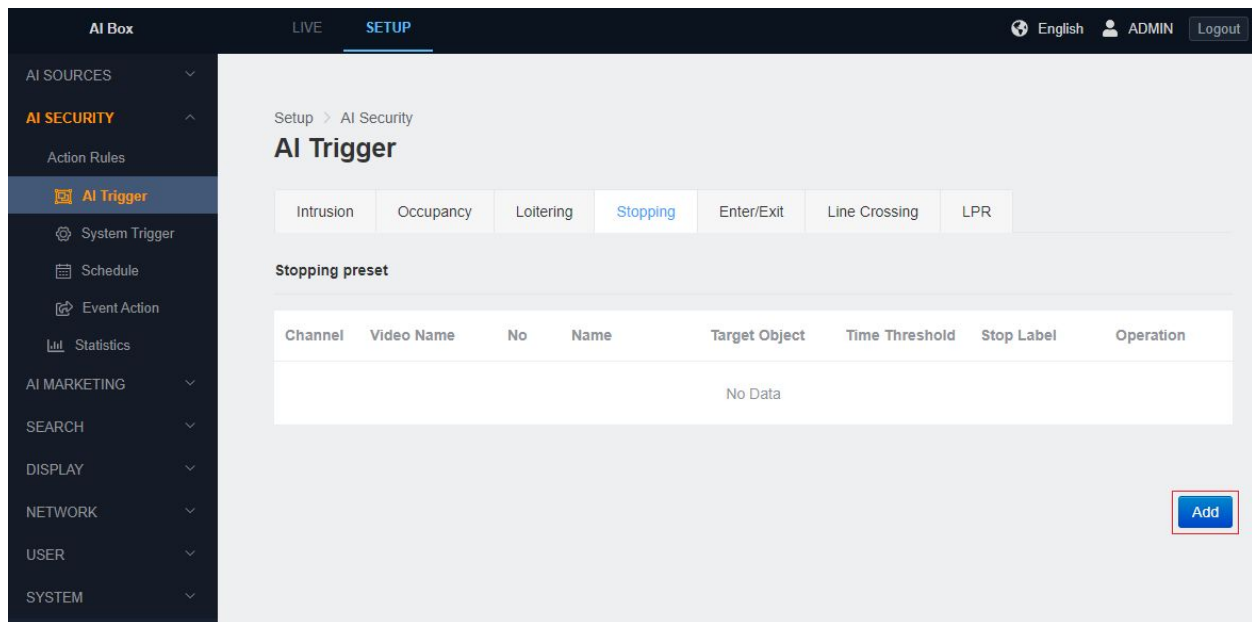

- 1) In the 'SETUP' application tab, enter the 'AI Trigger' menu under the 'Action Rules' menu.
- 2) Click 'Stopping' tab.
- 3) Click the 'Add' button at the bottom.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion | Occupancy | Loitering | **Stopping** | Enter/Exit | Line Crossing | LPR

Stopping preset

Name

Video Source

Target Object

Dwell Time 30 second(s)

Maximum time threshold to judge

Advanced Setup

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class

It is possible to select multiple objects for detection.

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

- 7) Set the 'Dwell Time'. Triggered when detection target stays longer than set time.
- 8) Show additional settings when you check for the 'Advanced Setup'.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion | Occupancy | Loitering | **Stopping** | Enter/Exit | Line Crossing | LPR

Stopping preset

Name: Trigger preset name

Video Source: Select

Target Object: Select

Dwell Time: - 30 + second(s)
Maximum time threshold to judge

Advanced Setup

Stop Label: Rename Label

Count Reset: OFF

9) 'Stop Label' allows you to set the count name of the widget.

10) 'Count Reset' allows you to set the time to reset the widget's count. You can also reset manually by pressing the 'RESET' button.

6 Action Rules



rtsp://ADMIN:****@172.17.0.162:5554/live/ch16

- 11) It will ignore objects that are not moving if the 'Ignore Static Object' is enabled.
- 12) Set ROI zone
 - Move the entire ROI by dragging its zone.
 - Move the edge by dragging the edge of the ROI.
 - Click on the line of the ROI to create a new edge.
 - Right click the edge of ROI to delete the edge.
- 13) Drag the Widget rectangle in the upper right corner to set where the widget will appear.

6 Action Rules




- 14) Click the 'APPLY' button at the bottom to save.
- 15) The Widget will display properly if the trigger is added.
- 16) After confirming the settings, click the 'CLOSE' button at the bottom to check the list.

- **Enter/Exit**

Enter/Exit is a function that is triggered when the detection target enters or exits based on the boundary of the area on the ROI set zone on the screen. ([Caution] Judging whether an object has entered the zone is based on when the object's center coordinates span the boundary line. The center coordinates can be seen by activating the Object Trajectory option in the DISPLAY-> OSD item.)

6 Action Rules

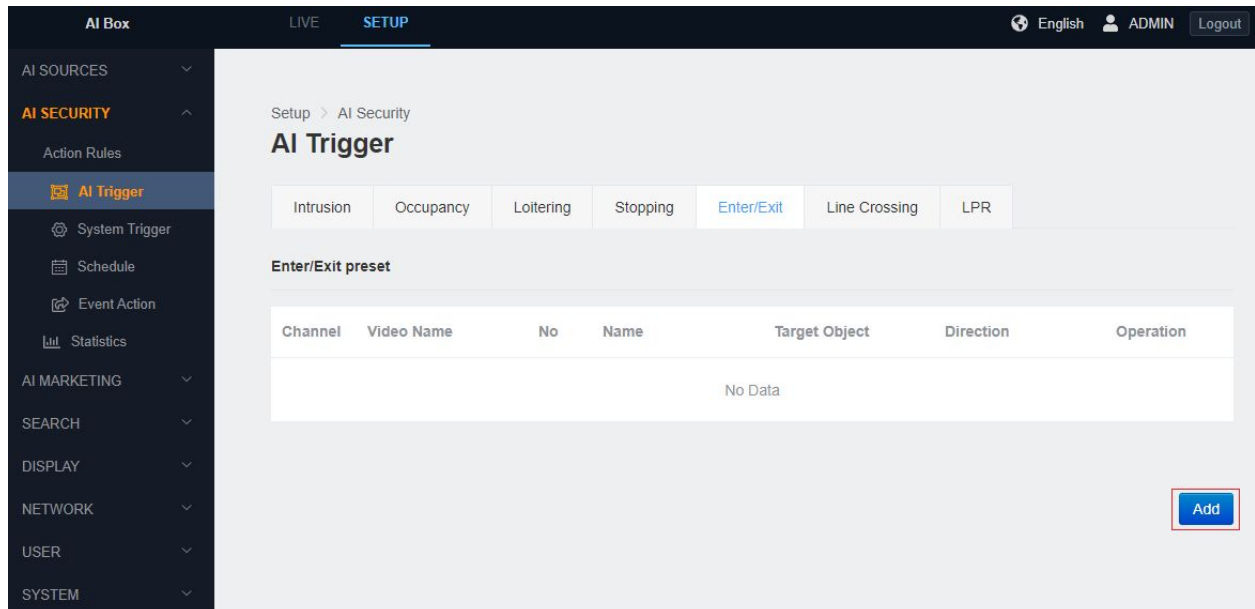

- 1) In the 'SETUP' application tab, enter the 'AI Trigger' menu under the 'Action Rules' menu.
- 2) Click 'Enter/Exit' tab.
- 3) Click the 'Add' button at the bottom.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion Occupancy Loitering Stopping **Enter/Exit** Line Crossing LPR

Enter/Exit preset

Name

Video Source

Target Object

Direction

Advanced Setup

APPLY **CLOSE**

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class.

It is possible to select multiple objects for detection.

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

- 7) Set 'Direction'

enter - detect the target enters the zone.

exit - detect the target goes out of the zone.

both - detect both directions.

- 8) Show additional settings when you check for the 'Advanced Setup'.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion Occupancy Loitering Stopping **Enter/Exit** Line Crossing LPR

Enter/Exit preset

Name

Video Source

Target Object

Direction

Advanced Setup

Crossing count
Triggerred at every 1 time(s) of line crossing detected.


Enter Direction Label

Exit Direction Label

Count Reset

- 9) Crossing count function sets how many times an event will occur when an object crossing the area boundary is detected.
- 10) 'Enter/Exit' Direction Label set the label name of the widget count.
- 11) 'Count Reset' allows you to set the time to reset the widget's count. You can also reset manually by pressing the 'RESET' button.

6 Action Rules

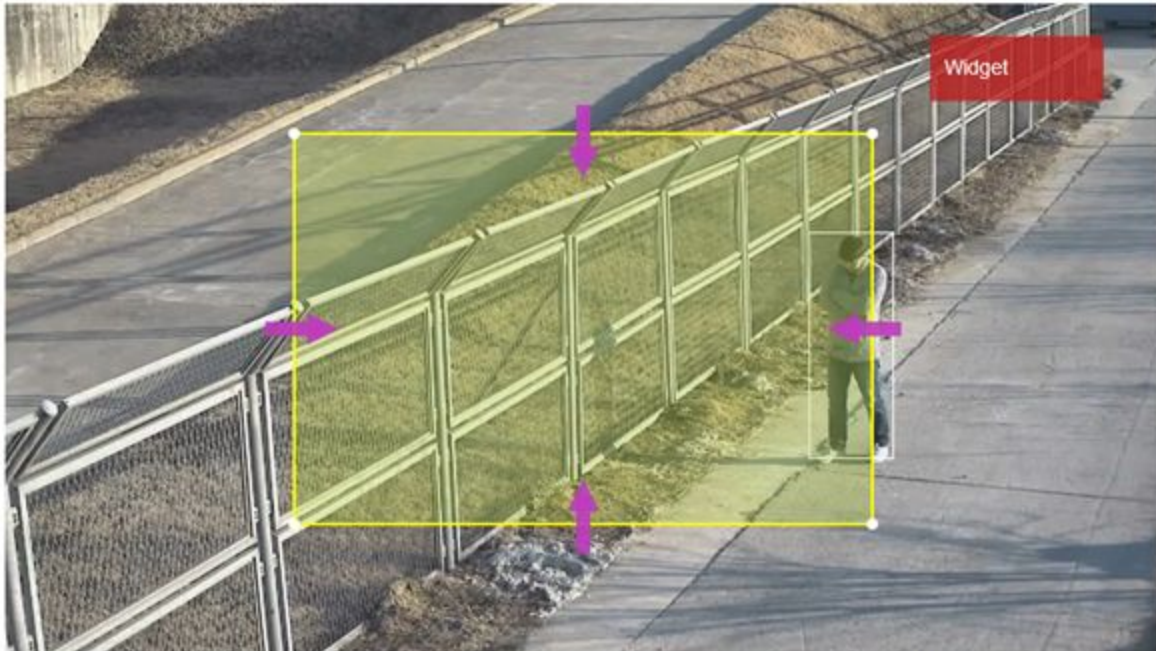

12) Set ROI zone.

Move the entire ROI by dragging its zone.

Move the edge by dragging the edge of the ROI.

Click on the line of the ROI to create a new edge.

Right click the edge of ROI to delete the edge.

13) Drag the Widget rectangle in the upper right corner to set where the widget will appear.

6 Action Rules




14) Click the 'APPLY' button at the bottom to save.

15) The Widget will display properly if the trigger is added.


- **Line Crossing**

Line Crossing is a function set polyline on the screen and it triggered when the detected object crosses the line. ([Caution] Judging whether an object has entered the zone is based on when the object's center coordinates span the boundary line. The center coordinates can be seen by activating the Object Trajectory option in the DISPLAY-> OSD item.)

6 Action Rules

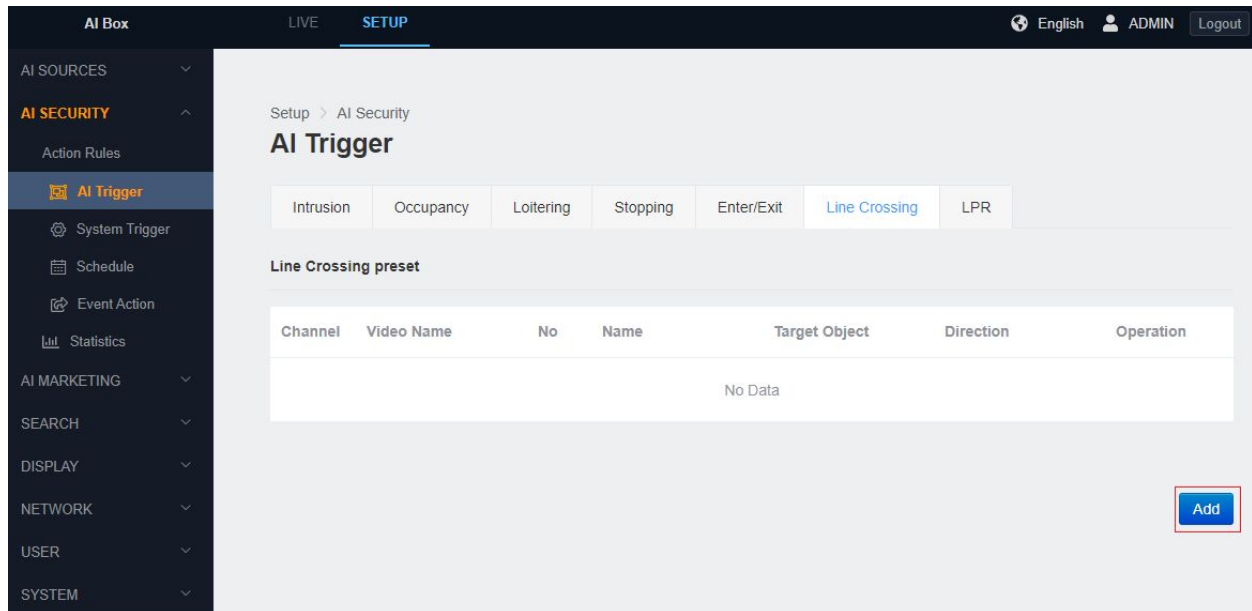

- 1) In the 'SETUP' application tab, enter the AI Trigger menu under the 'Action Rules' menu.
- 2) Click Line 'Crossing tab'.
- 3) Click the 'Add' button at the bottom.

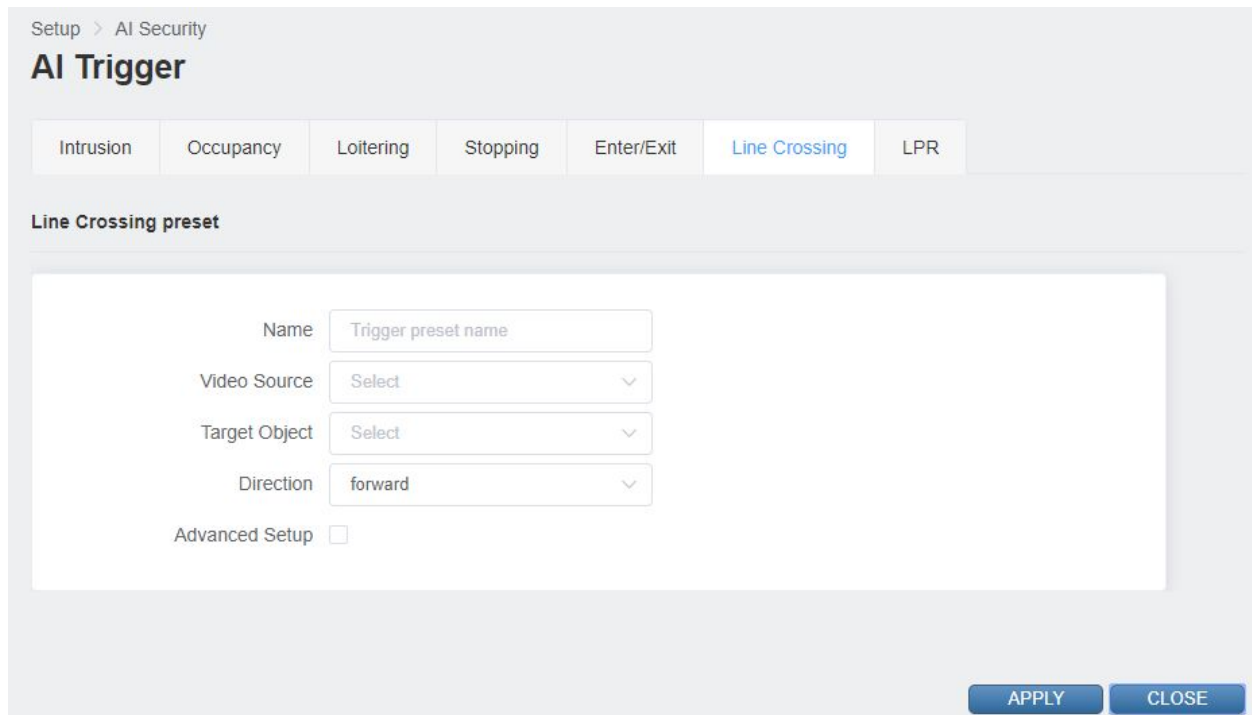

6 Action Rules

- 4) Input a Trigger preset name.
- 5) Select 'Video Source'.
- 6) Select the discovery target class.

It is possible to select multiple objects for detection.

The detection target may vary depending on the algorithm setting of the selected 'Video Source'.

- 7) Set Direction.

'forward'-Detects the direction of the green arrow.

'reverse'- Detects the direction of the purple arrow.

'both'-Detects both directions.

- 8) Show additional settings when you check for the 'Advanced Setup'.

6 Action Rules

Setup > AI Security

AI Trigger

Intrusion | Occupancy | Loitering | Stopping | Enter/Exit | **Line Crossing** | LPR

Line Crossing preset

Name

Video Source

Target Object

Direction

Advanced Setup

Crossing count
Triggerred at every 1 time(s) of line crossing detected.


Forward Direction Label

Reverse Direction Label

Count Reset

- 9) 'Crossing count' function sets how many times an event will occur when an object crossing the area boundary is detected.
- 10) 'Forward/Reverse Direction Label' sets the label name of the widget counter.
- 11) 'Count Reset' allows you to set the time to reset the widget's count. You can also reset manually by pressing the 'RESET' button.

6 Action Rules

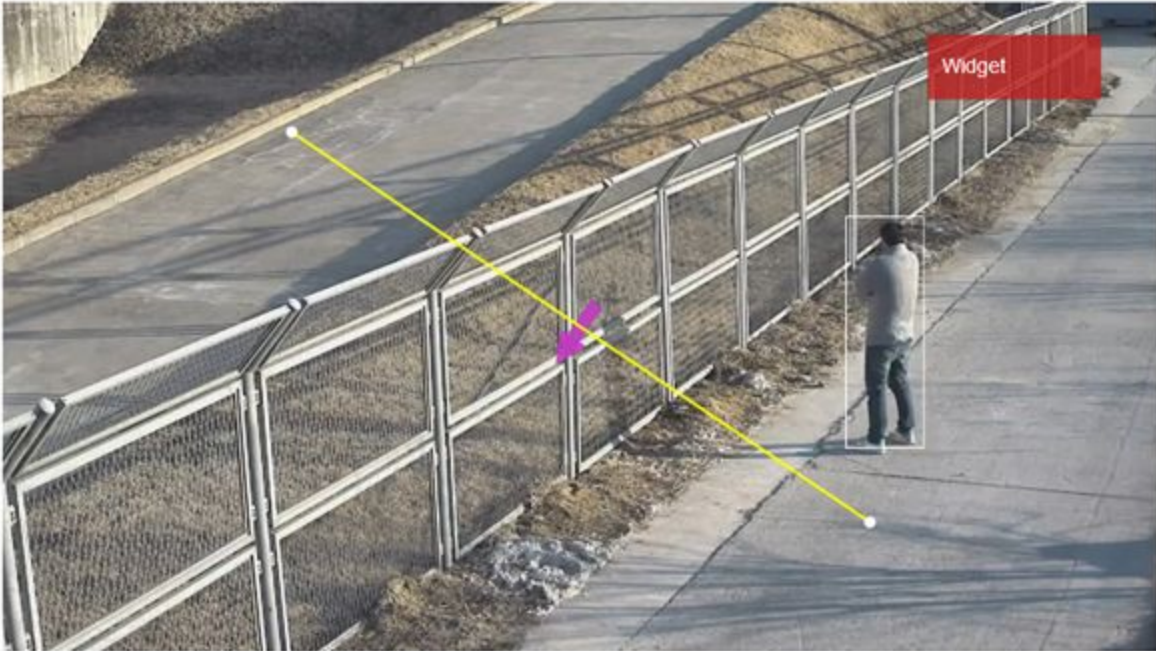

rtsp://ADMIN:****@172.17.0.162:5554/live/ch16

12) Set 'Polyline'.

Move the edge by dragging the edge of the 'Polyline'.

Click on the line of the 'Polyline' to create a new edge.

Right click the edge of 'Polyline' to delete the edge.

13) Drag the Widget rectangle in the upper right corner to set where the widget will appear.

6 Action Rules



- 14) Click the 'APPLY' button at the bottom to save.
- 15) The Widget will display properly if the trigger is added.
- 16) After confirming the settings, click the 'CLOSE' button at the bottom to check the list.

3. System Trigger setting

- Alarm In

Alarm In does not require a separate preset setting. Alarm In can be added directly in Action Rule setting.


6 Action Rules

- Recurrence

Create a Recurrence preset.

It is possible to add the Preset name and pattern(time).

4. Schedule setting

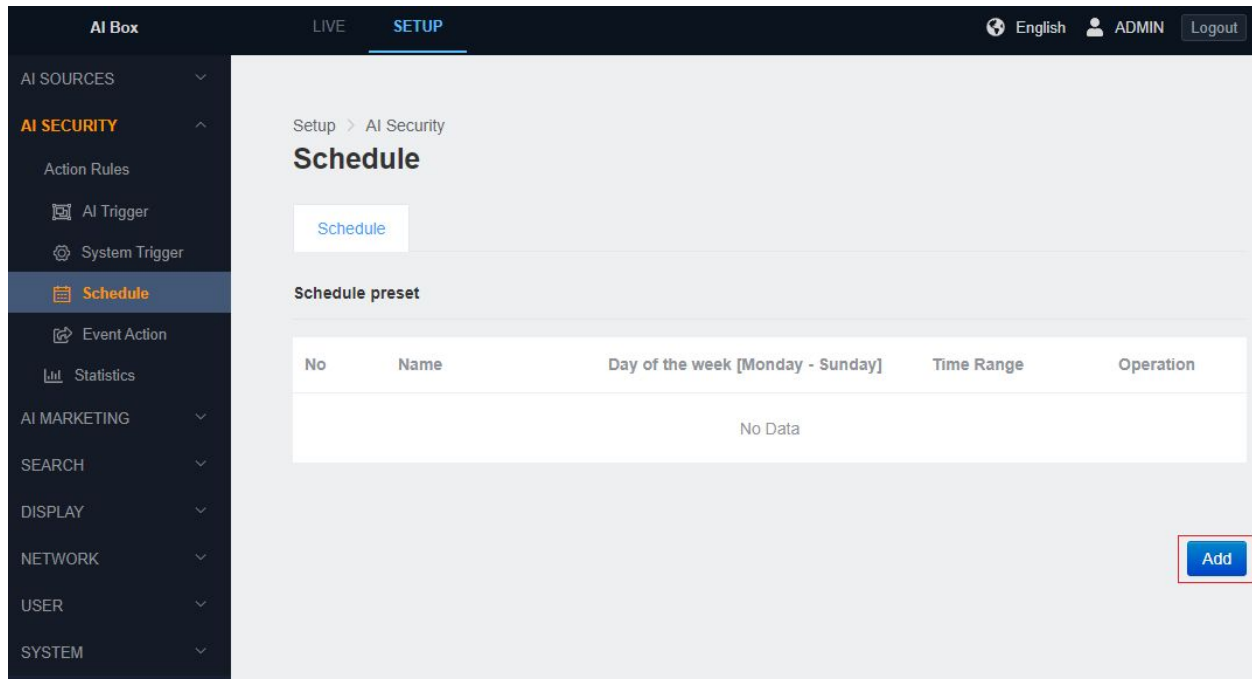

The screenshot shows the 'AI Box' interface with the 'SETUP' tab selected. The left sidebar contains a menu with 'AI SECURITY' expanded, showing 'Action Rules', 'AI Trigger', 'System Trigger', 'Schedule' (highlighted), 'Event Action', and 'Statistics'. The main content area is titled 'Setup > AI Security' and 'Schedule'. A 'Schedule' button is visible. Below it, the 'Schedule preset' section contains a table with the following structure:

No	Name	Day of the week [Monday - Sunday]	Time Range	Operation
No Data				

An 'Add' button is located at the bottom right of the page.

- 1) In the 'SETUP' application tab, enter the Schedule menu under the 'Action Rules' menu.
- 2) Click the 'Add' button at the bottom.

6 Action Rules

Setup > AI Security

Schedule

Schedule

Schedule preset

Name

Day of the week

Time Range ~

APPLY CLOSE

- 3) Input the schedule preset name.
- 4) Select the day.
- 5) Select the start time and end time of the schedule.
- 6) Click the 'APPLY' button at the bottom to save.

6 Action Rules

Setup > AI Security

Schedule

Schedule

Schedule preset

No	Name	Day of the week [Monday - Sunday]	Time Range	Operation
1	test	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input checked="" type="checkbox"/> <input checked="" type="checkbox"/>	01:00 ~ 23:00	Edit Delete

Add

7) Check the schedule preset added from the list.

※ All 24 hours will be included in the schedule if you set the same start and end time.

Name

Day of the week

Time Range ~

<Weekend 24 hours setup example>

※ Please set it up like as follows if you need a schedule beyond midnight.

6 Action Rules

Setup > AI Security

Schedule

Schedule

Schedule preset

Name

Day of the week +4

Time Range ~

APPLY CLOSE

<Weekday non-working time settings example>

It will be included in the schedule until the end time of the next day of the set day if the Time Range set pass the midnight, In the example above, Monday and Friday are set so the actual schedule is valid until 9:00 AM on Saturday.

5. Event Action setting


Event actions are classified into three categories: Network, System, and VMS.

- **Network Action Event**

6 Action Rules

■ Email

Set Email preset in the Email menu. In the Email preset, set the necessary value for sending email such as SMTP server information. You can also send a test email to confirm that your settings are correct.

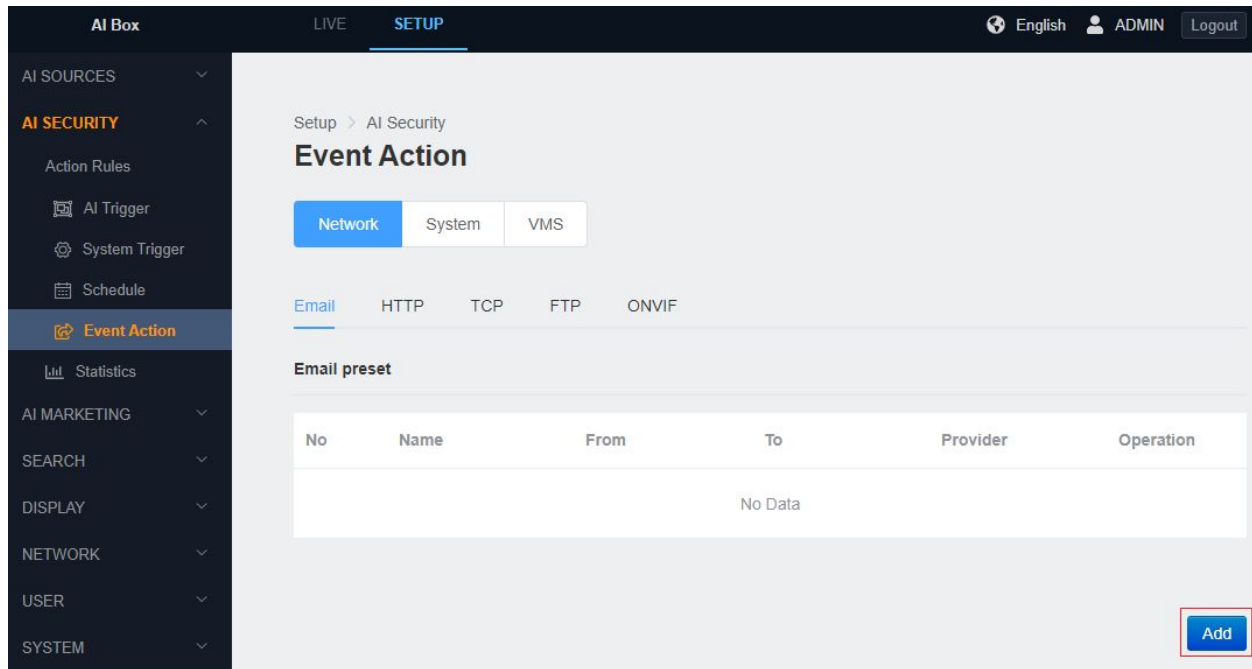

- 1) In the 'SETUP' application tab, enter the Action menu below the 'Action Rules' menu.
- 2) Click the 'Email' tab to enter the Email preset list and click the 'Add' button.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP FTP ONVIF

Email preset

Name

To
Multiple names separated by commas(,)

Attach Snapshot

- 3) Input a name for the Email preset in Name tab
- 4) Input the email address you want to receive in 'TO'
- 5) Check the 'Attach Snapshot' to display the Snapshot transfer sub-settings.

Name

To
Multiple names separated by commas(,)


Attach Snapshot

Snapshot Time Range

- 6) Snapshots occur approximately once every second. Set the time range for the snapshots you want to receive by email.

6 Action Rules

- 7) Select a service provider in the Provider tab. Please select the 'Custom' if the service provider you want to use is not listed.

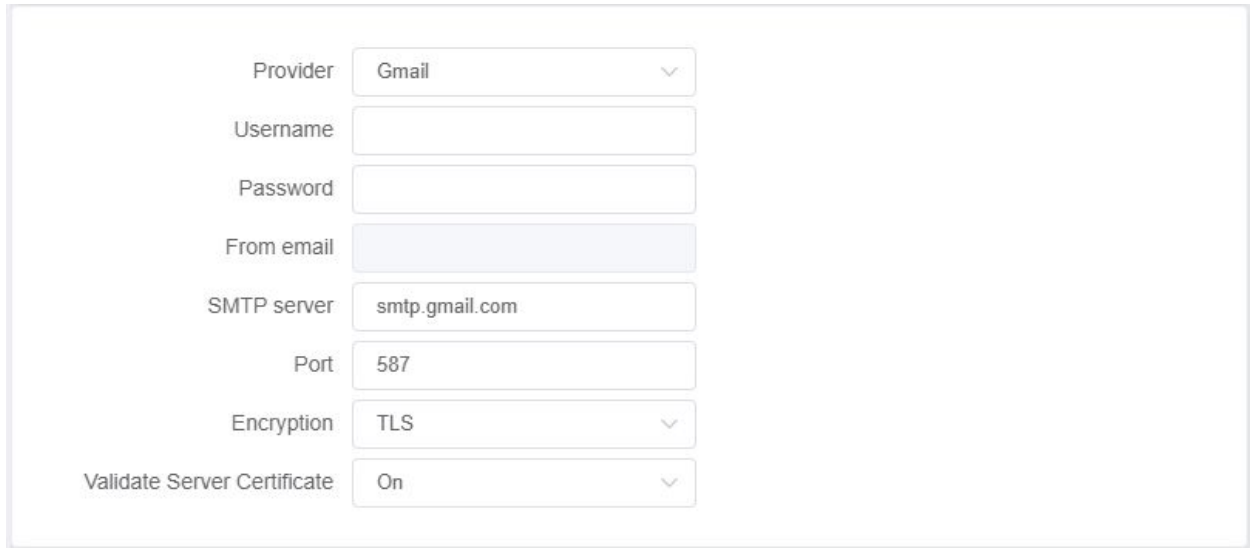

The image shows a configuration form for an email service provider. The fields are as follows:

Provider	Gmail
Username	
Password	
From email	
SMTP server	smtp.gmail.com
Port	587
Encryption	TLS
Validate Server Certificate	On

- 8) Input a user name and password that can authenticate with the Email service provider.
- 9) Input the SMTP server address and port number.
- 10) Select Encryption type.
- 11) Select the certificate validation option for the SMTP server.

6 Action Rules

The screenshot shows a configuration interface for an Event Action Message. It includes a dropdown menu labeled 'Event Action Message' with the option 'Use template' selected, and a blue 'Use' button. Below this is another dropdown menu labeled 'Select to add tokens' with a blue 'Add' button. Underneath these is an 'Editable Box' which is currently empty. At the bottom is a 'Message Example' section, which is also empty in this view.

12) Edit the Email action message. You can configure the message by using a template or by including an event attribute token.

Message Example

```
1
My AI Trigger
Enter/Exit
3
00115F2A0096
1561961100.123000
2000-07-01T00:00:00.012345+00:00
```

13) Check the Message Example for an example of the actual message being sent.

14) Click the 'TEST' button to confirm that the receiving test Email's settings are correct.

15) Click the 'APPLY' button at the bottom to save.

16) Check the Email preset section you added in the list.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP FTP ONVIF

Email preset


No	Name	From	To	Provider	Operation
1	TEST	USER	test@test.com	Gmail	Edit Delete

Add

■ HTTP

You can set the HTTP callback preset in the HTTP tab. In the HTTP preset, set server address and authentication information for receiving the message. In addition, the data format to be transmitted when an event occurs can be set using the event property value token. You can also send a test message to check if the settings are correct.

6 Action Rules

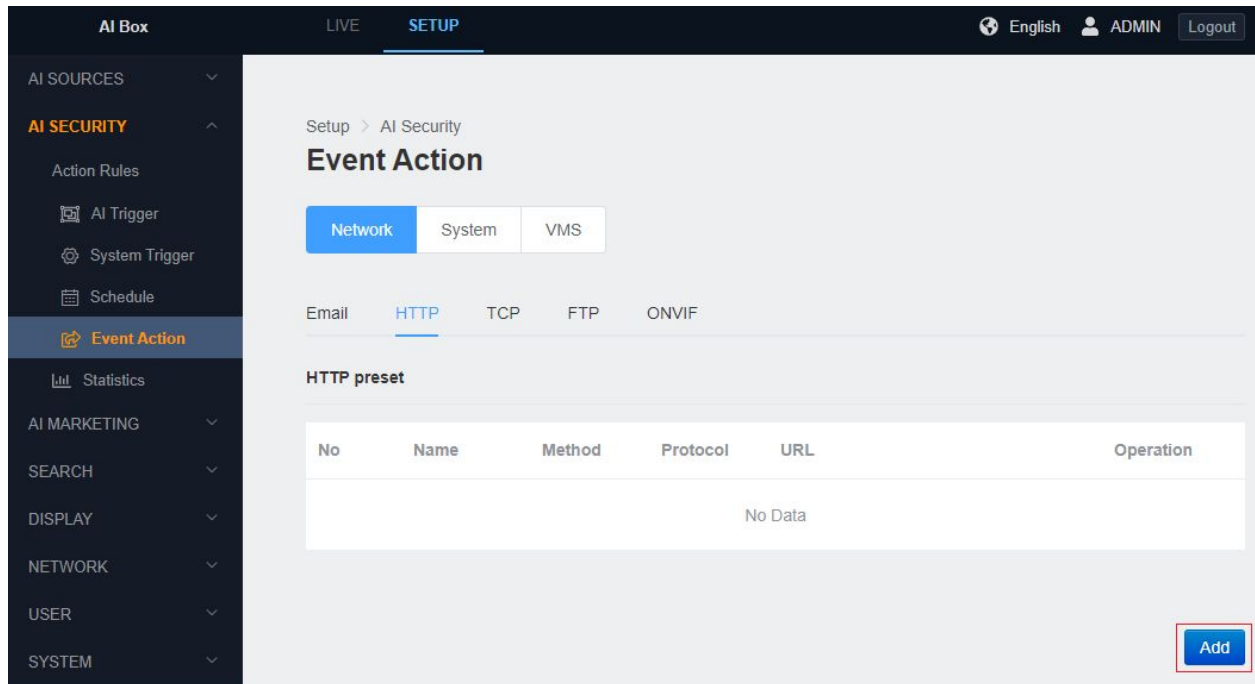

- 1) In the 'SETUP' tab, enter the 'Event Action' menu under the 'Action Rules' menu.
- 2) Click the HTTP Tab to enter the list of HTTP callback presets and click the 'Add' button.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP FTP ONVIF

HTTP preset

Name	<input type="text" value="Action preset name"/>
Protocol	<input type="text" value="HTTP"/>
URL	<input type="text" value="http:// your-domain-name.com/path"/>
Authentication	<input type="text" value="None"/>
Method	<input type="text" value="POST"/>
Content-Type	<input type="text" value="multipart/form-data"/>
Attach Snapshot	<input type="checkbox"/>

- 3) Type the name of the HTTP callback preset in the Name section.
- 4) Select HTTP/HTTPS protocol.
- 5) Input the URL of the server.
- 6) Check the Attach Snapshot to display the Snapshot transfer sub-settings.

6 Action Rules

A screenshot of a configuration form for an HTTP action rule. The form includes the following fields:

- Name:** A text input field containing "Action preset name".
- Protocol:** A dropdown menu with "HTTP" selected.
- URL:** A text input field with "http://" in a light blue box and "your-domain-name.com/path" in a white box.
- Authentication:** A dropdown menu with "None" selected.
- Method:** A dropdown menu with "POST" selected.
- Content-Type:** A dropdown menu with "multipart/form-data" selected.
- Attach Snapshot:** An unchecked checkbox.

- 7) Snapshots occur approximately once every second. Set the time range for the snapshot to attach.

A screenshot of a configuration form for an Event Action Message. The form includes the following elements:

- Event Action Message:** A dropdown menu with "Use template" selected, accompanied by a blue "Use" button.
- Select to add tokens:** A dropdown menu with "Select to add tokens" selected, accompanied by a blue "Add" button.
- Editable Box:** A large, empty white text area.
- Message Example:** A large, empty light blue text area.

- 8) Edit the HTTP action message. You can configure the message by using a template or by including an event attribute token.

6 Action Rules

Message Example

```
1
My AI Trigger
Enter/Exit
3
00115F2A0096
1561961100.123000
2000-07-01T00:00:00.012345+00:00
```

- 9) Check the Message Example for an example of the actual message being sent
- 10) Click the 'TEST' button to confirm that the receiving test Email's settings are correct
- 11) Click the 'APPLY' button at the bottom to save

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP FTP ONVIF

HTTP preset

No	Name	Method	Protocol	URL	Operation
1	test	POST	HTTP	http://test.com	Edit Delete


Add

- 12) Check the HTTP preset section you added in the list.

6 Action Rules

■ TCP

You can set the TCP callback preset in the TCP section. The TCP preset sets the server address and port information for receiving messages. In addition, the message format to be sent when an event occurs can be set using the event property value token. You can also send a test message to confirm that the settings are correct.

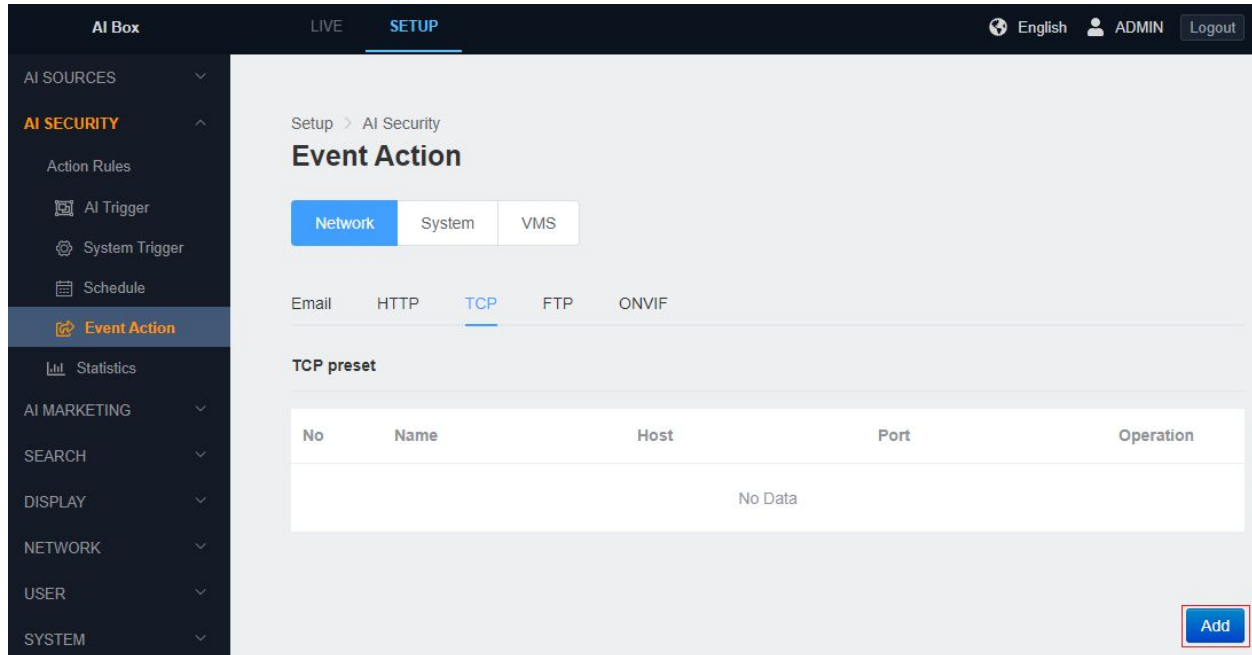

- 1) In the 'SETUP' tab, enter the 'Event Action' menu under the 'Action Rules' menu.
- 2) Click the TCP Tab to enter the TCP preset list and click the 'Add' button.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP FTP ONVIF

TCP preset

Name

Host

Port

- 3) Input a name for the TCP preset in Name section.
- 4) Input the host IP address or domain name where the TCP receiving server is running.
- 5) Input the Host port number of the TCP receiving server.

Event Action Message

Editable Box

Message Example

6 Action Rules

- 6) Edit the TCP action message. You can configure the message by using a template or by including an event attribute token.

Message Example

```
1
My AI Trigger
Enter/Exit
3
00115F2A0096
1561961100.123000
2000-07-01T00:00:00.012345+00:00
```

- 7) Check the 'Message Example' for an example of the actual message being sent.
- 8) Click the 'TEST' button to send the example message to the server and check whether it is received.
- 9) Click the 'APPLY' button at the bottom to save.

Setup > AI Security

Event Action

Network System VMS

Email HTTP **TCP** FTP ONVIF

TCP preset

No	Name	Host	Port	Operation
1	test	test	1	Edit Delete


[Add](#)

- 10) Check the TCP preset section that you added in the list.

6 Action Rules

■ FTP

You can set the FTP callback preset in the FTP section. The FTP preset sets the server address and port information for receiving messages. In addition, the message format to be sent when an event occurs can be set using the event property value token. You can also send a test message to confirm that the settings are correct.

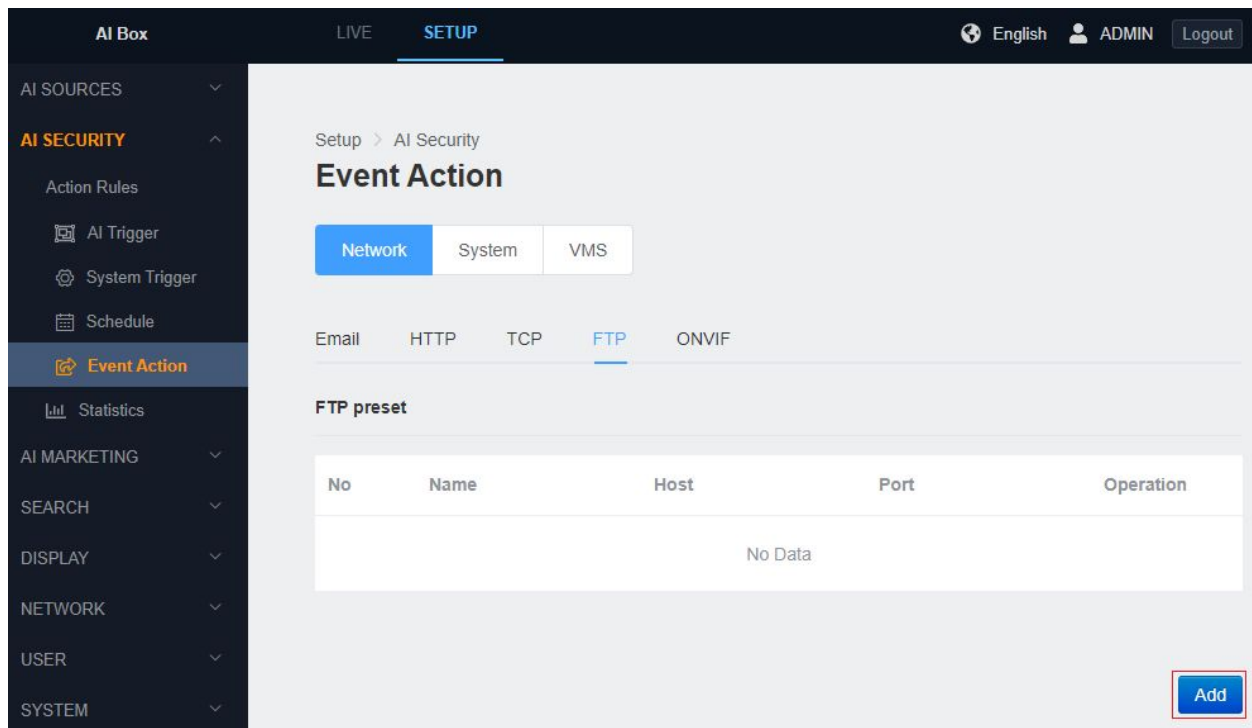

- 1) In the 'SETUP' tab, enter the 'Event Action' menu under the 'Action Rules' menu.
- 2) Click the FTP Tab to enter the FTP preset list and click the 'Add' button.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP **FTP** ONVIF

FTP preset

Name

Host

Port
(Default: :21, 1025~65535)

Passive Mode

Username

Password

- 3) Input a name for the FTP preset in Name section.
- 4) Input the host IP address or domain name where the FTP receiving server is running.
- 5) Input the Host port number of the FTP receiving server.

Snapshot Time Range

- 6) Edit the Snapshot Time Range (From secs before, To secs after)

6 Action Rules

Directory Name Format	<input type="text" value="Use template"/>	Use
	<input type="text" value="Select to add tokens"/>	Add
<input type="text"/>		
File Name Format	<input type="text" value="Use template"/>	Use
	<input type="text" value="Select to add tokens"/>	Add
<input type="text"/>		
Send example message		TEST

- 7) Edit the the Directory Name Format and File Name Format. You can configure the Directory Name Format and File Name Format by using a template or by including an event attribute token.
- 8) Click the 'TEST' button to send the example Name to the server and check whether it is received.

6 Action Rules

Setup > AI Security

Event Action

Network System VMS

Email HTTP TCP **FTP** ONVIF

FTP preset

No	Name	Host	Port	Operation
1	test	test	21	Edit Delete

Add


9) Click the 'APPLY' button at the bottom to save.

10) Check the FTP preset section that you added in the list.

■ ONVIF

ONVIF RTSP Metadata Stream is available in the product, so do not need separate preset settings. In the ONVIF Tab, you can see the ONVIF Topic name for each trigger type.

6 Action Rules

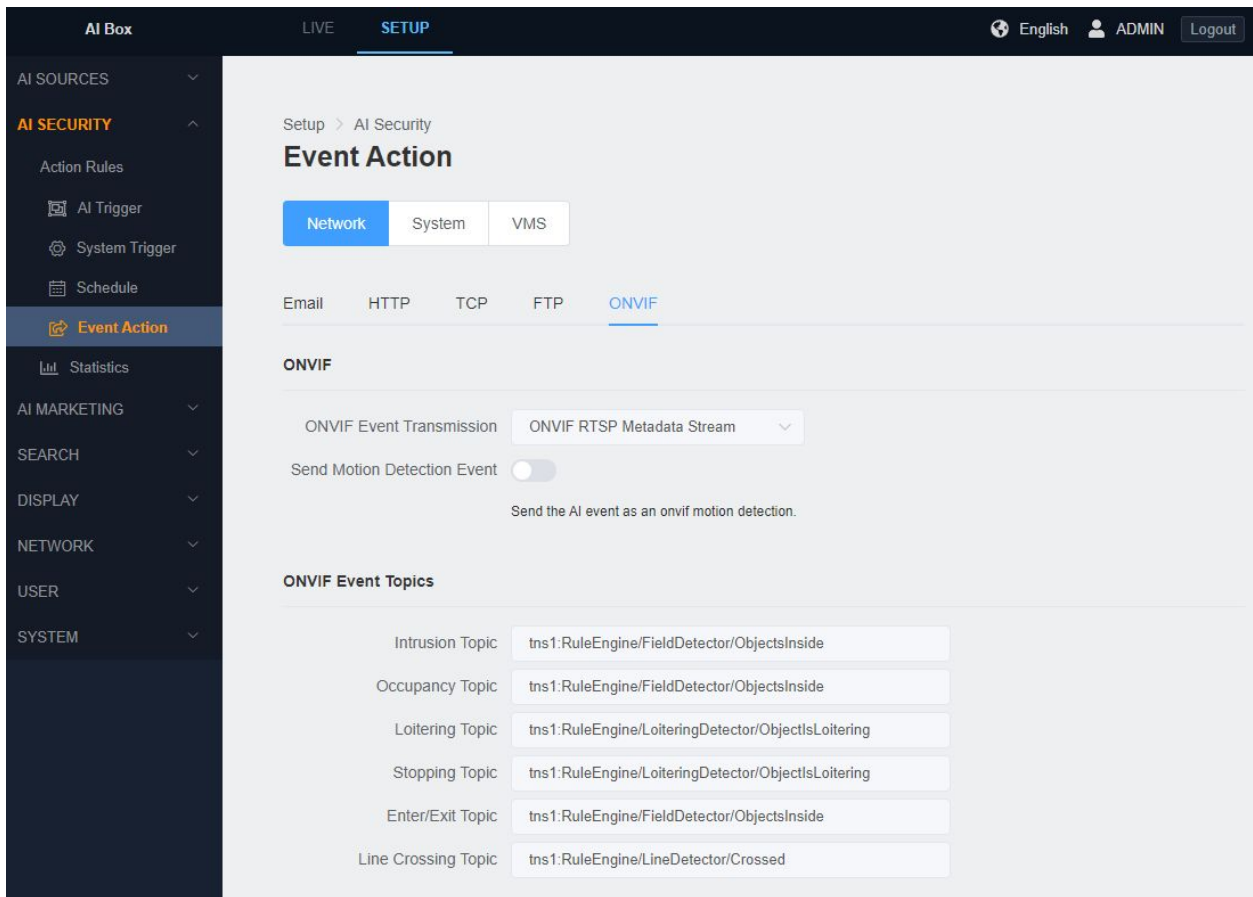

- 1) In the 'SETUP' application tab, enter the 'Event Action' menu below the 'Action Rules' menu.
- 2) Click 'ONVIF' Tab.


● System event action

■ DISARM

AI BOX is an ARM state that can generate an alarm action event at any time. However, the connected controller can be changed to DISARM state to prevent alarm action

6 Action Rules


event. For example, alarm events are not important during system checks, so you can create and work with the DISARM state as shown above.

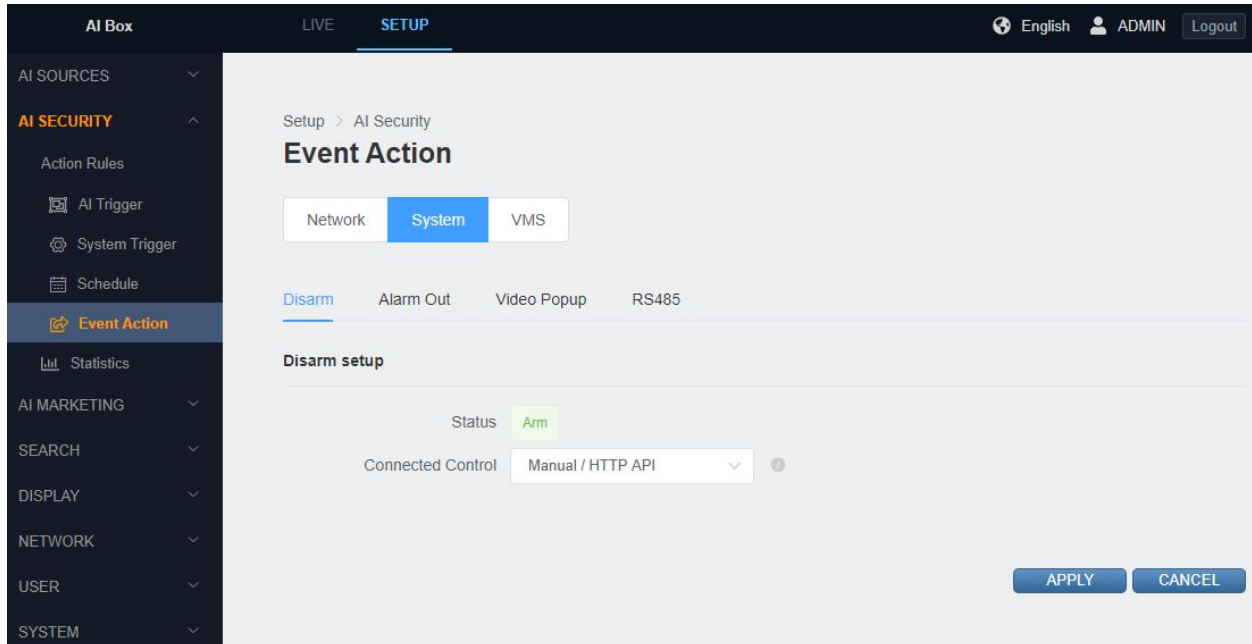

■ Alarm Out

It is possible to set how long it will activate from the Alarm Out Duration when the Alarm Out action is activated. The entry default is 5 seconds.

6 Action Rules

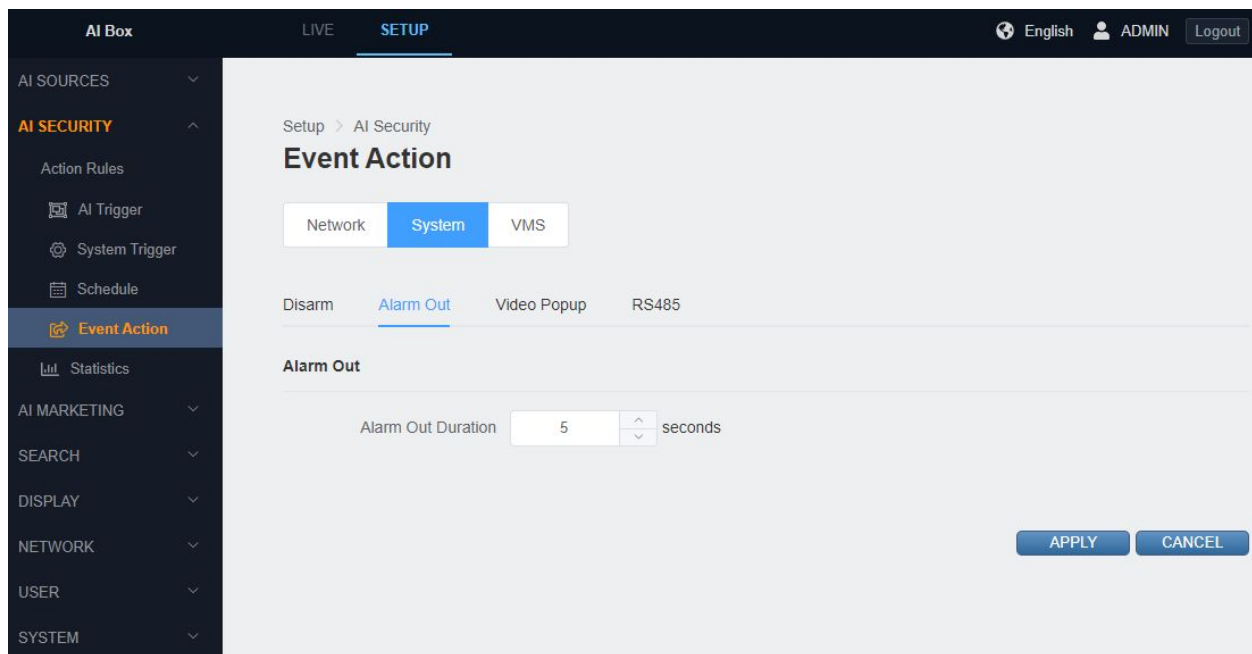


- 1) In the 'SETUP' application tab, enter the 'Event Action' menu under the 'Action Rules' menu.
- 2) Input the value for the 'Alarm Out Duration'. You can use the UP/DOWN buttons or input a number directly. It is possible to set a value from 1 to 60.
- 3) Click the 'APPLY' button at the bottom to save

■ Video Popup

Set action rule. If you add the video popup in the action setting, the channel where the event occurred on the live screen pops up for the set time.


6 Action Rules

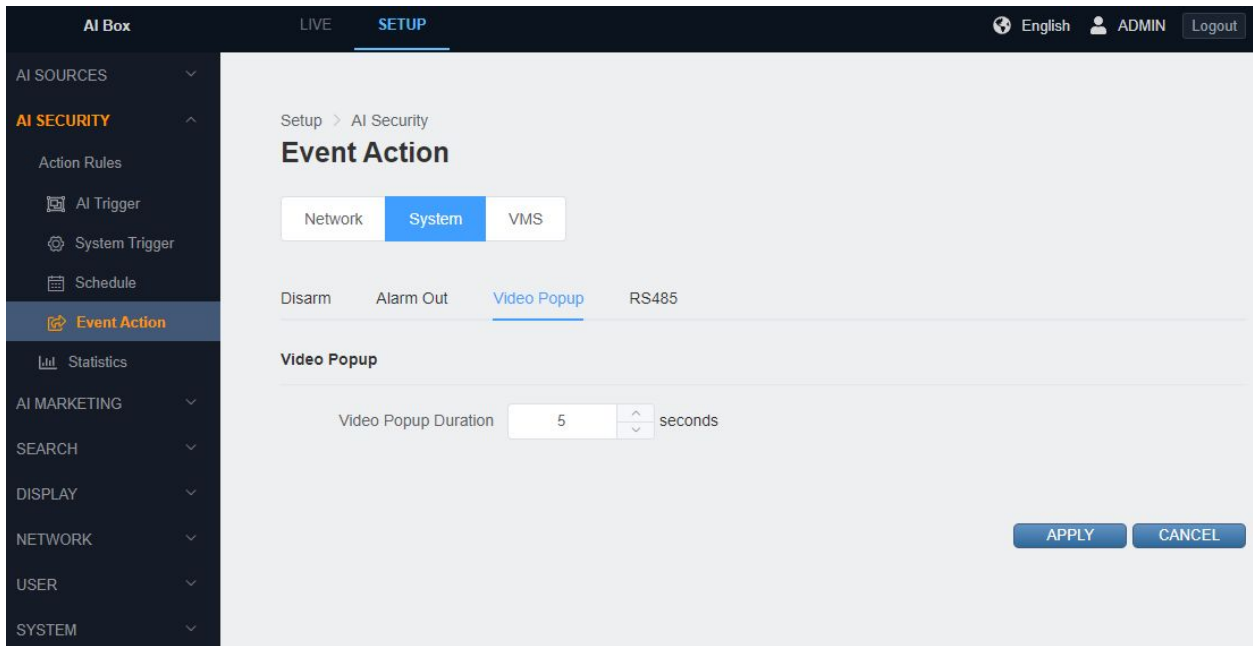

■ RS485

RS485 exports action messages sequentially without using a separate protocol. This can be used by setting the default baud rate and editing the action message.


6 Action Rules

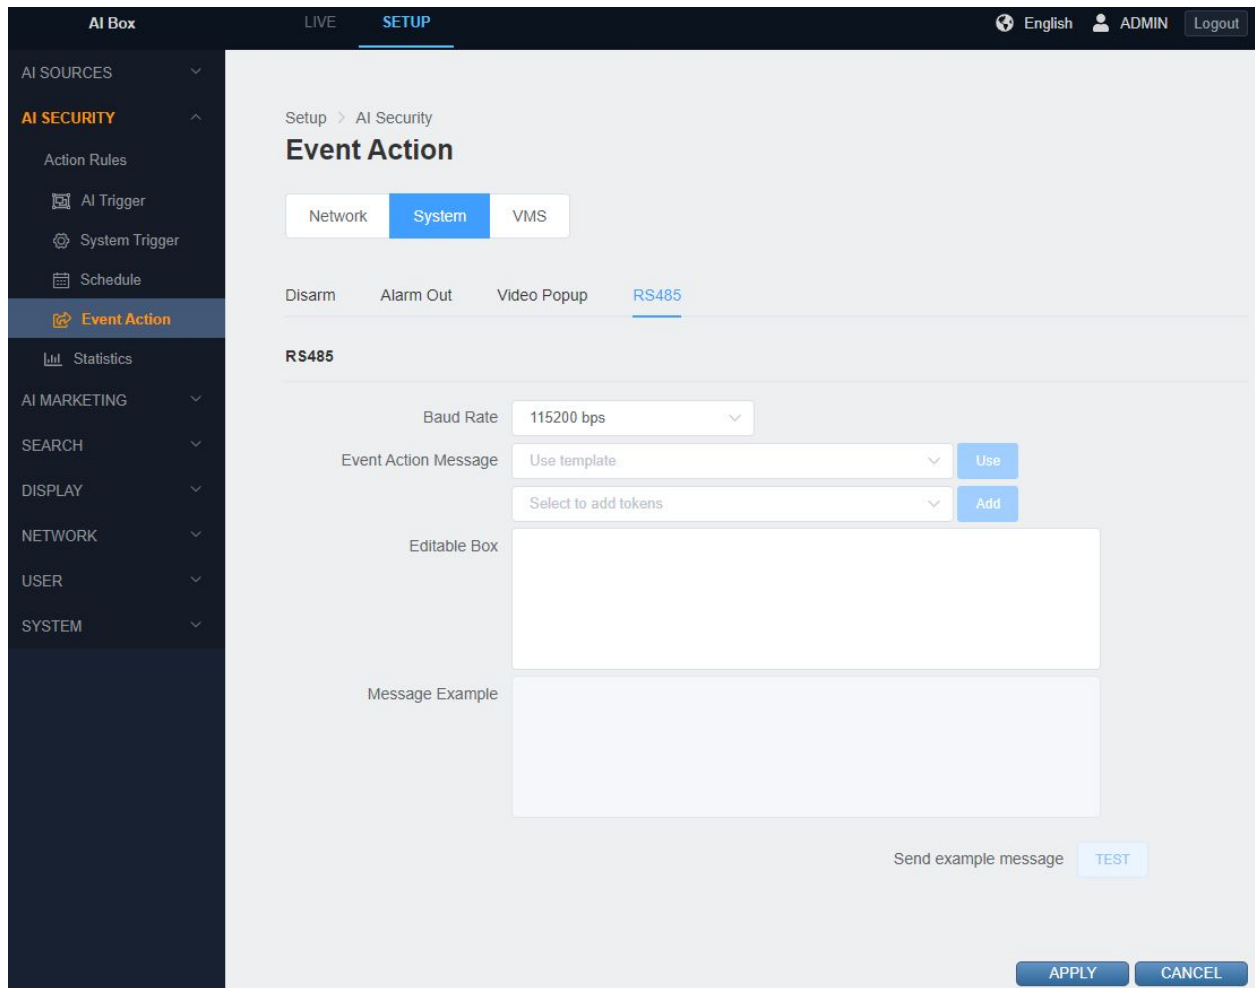

- 1) Select RS485's Baud Rate.
- 2) Edit the Event action message. You can configure the message by using a template or by including an event attribute token.
- 3) Check the Message Example for an example of the actual message being sent.
- 4) Click the 'TEST' button to send the example message to the server and check whether it is received.
- 5) Click the 'APPLY' button at the bottom to save.

- **VMS Event Action**

6 Action Rules

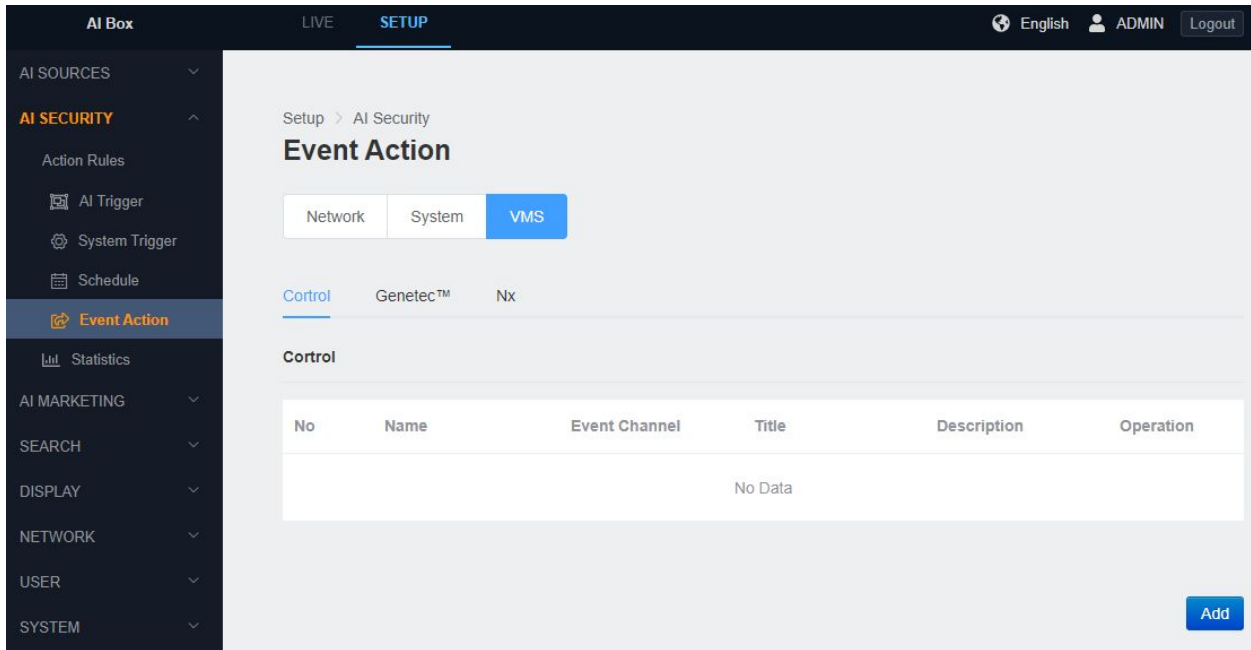

- Control

See video tutorial (<https://youtu.be/yDxTFfNnmY>)

- Genetec™


See video tutorial (<https://youtu.be/ewjL8QHgR-w>)

- Nx


See video tutorial (<https://youtu.be/QRpj3BiHfiM>)

- Action Rules Setting

6 Action Rules

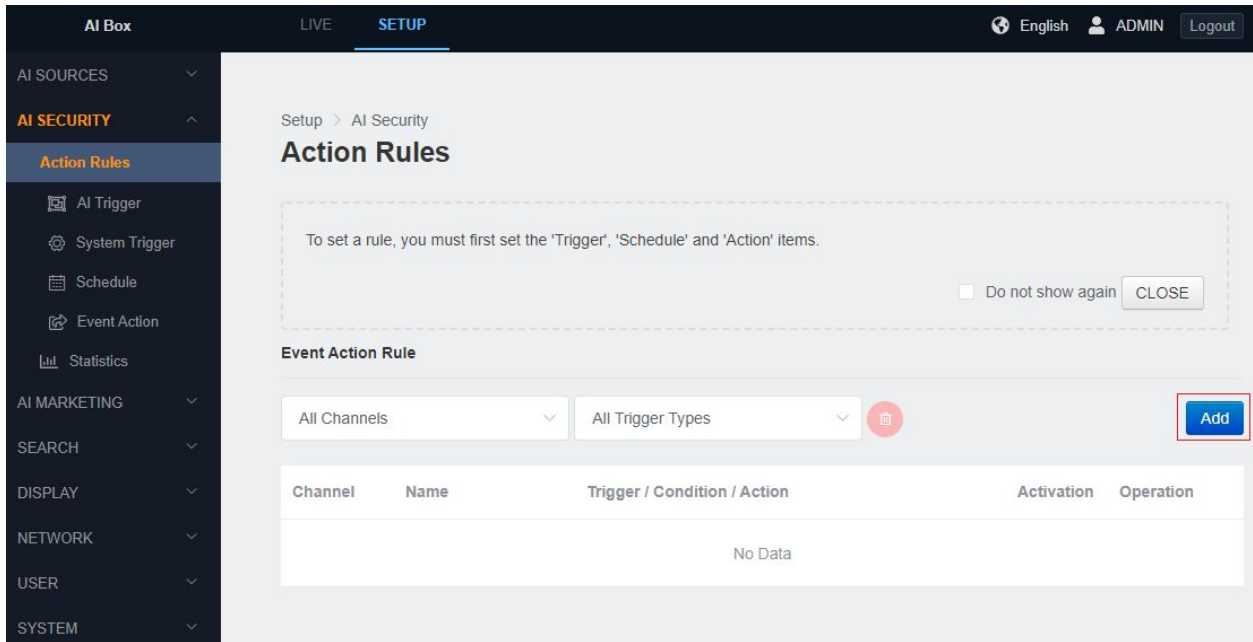

- 1) In the SETUP application tab, enter the Action Rule menu under the 'Action Rules'.
- 2) Click the 'APPLY' button at the bottom to save.

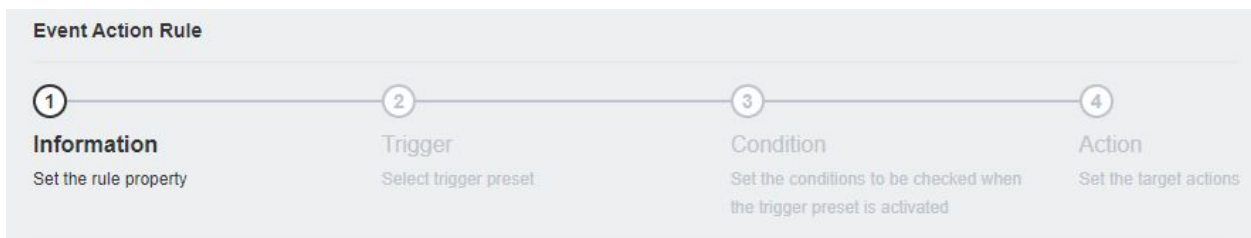

- 3) At the top of the UI, you will see a step indicator indicating the current progress step. Edit the HTTP action message. You can configure the message by
- 4) using a template or by including an event attribute token.

6 Action Rules

Information

Rule Name

NEXT

- 5) Create a name for the action rule and click the 'NEXT' button to move on to the next step.

Rule Summary

Information

Rule Name


Trigger

Conditions

Actions

- 6) The settings will be updated each time steps in the Action Rule Summary proceed.

Trigger Setup

Trigger 

PREV **NEXT**

- 7) Set the trigger type and its type in the Trigger Setup step. Then select Trigger Preset and click the 'NEXT' button to move to the next step.

6 Action Rules

The screenshot shows a 'Condition Setup' form. At the top, there is a 'Schedule' dropdown menu with 'Always' selected. Below this is a horizontal line. Underneath the line is a 'Condition' label followed by a circular button containing a plus sign. At the bottom left, there are two buttons: 'PREV' and 'NEXT'.

8) Select the desired item from the schedule preset.

It is set to 'Always' if you do not select a Schedule preset.

The condition is 'True' if any of the selected items are met when you select multiple schedules.

9) Click the + button to add another trigger to the condition.

The screenshot shows the 'Condition Setup' form with an 'Add Condition' section. It includes a 'Schedule' dropdown set to 'Always'. Below the 'Add Condition' section, there are two dropdown menus: 'Select Type' and 'Select Preset', followed by a blue 'Add' button. Below these is a field for a time value, showing '+/-', a dropdown, the number '5', a spinner control, and the unit 'seconds'. At the bottom left, there are 'PREV' and 'NEXT' buttons.

10) Select the Trigger type and preset.


11) Set the Condition Trigger valid time.

It is based on the Rule Trigger occurrence time set in the Trigger Setup step

6 Action Rules

- In case of + t seconds, it is true when condition trigger occurs within t seconds after trigger occurrence
- In case of - t seconds, it is true if condition trigger occurred before trigger occurred.
- In case of +/- t seconds, it is true when condition trigger occurs before or after trigger occurs within t seconds.

12) Click the <Add> button to add it to Condition.

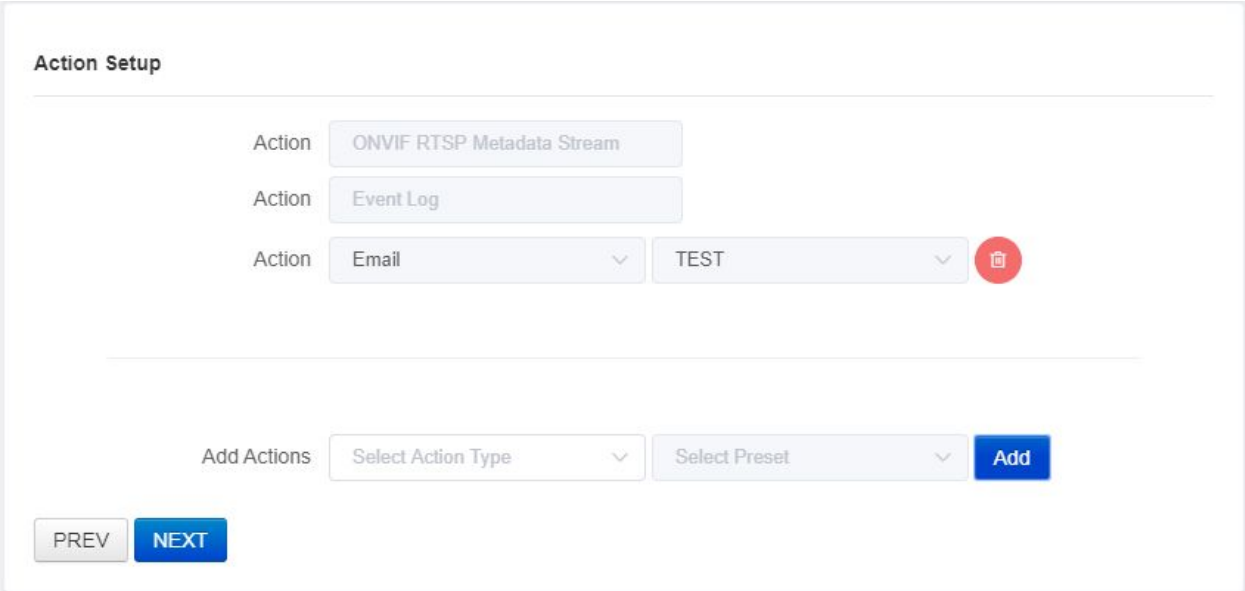

The screenshot shows the 'Action Setup' interface. It features a list of actions: 'ONVIF RTSP Metadata Stream', 'Event Log', and 'Email'. The 'Email' action is selected, and a 'TEST' preset is chosen. A red trash can icon is visible next to the 'Email' action. Below the list, there is an 'Add Actions' section with two dropdown menus: 'Select Action Type' and 'Select Preset', followed by a blue 'Add' button. At the bottom, there are 'PREV' and 'NEXT' buttons.

13) To delete the trigger added as a condition, click the trash can icon on the right.

14) When you have finished setting the condition, click the 'NEXT' button to move on to the next step.

6 Action Rules

Setup > AI Security

Action Rules

To set a rule, you must first set the 'Trigger', 'Schedule' and 'Action' items.

Do not show again CLOSE

Event Action Rule

All Channels ▼ All Trigger Types ▼ 🗑️ Add

Channel	Name	Trigger / Condition / Action	Activation	Operation	
CH 4	test	LPR	LPR	<input checked="" type="checkbox"/>	<a>Edit <a>Delete
		Schedule	Always		
		ONVIF RTSP Metadata Stream			
		Event Log			
		Email	TEST		

15) ONVIF RTSP Metadata Stream is the default in Action

All events with rules set are sent to the RTSP Metadata Stream.

16) To add another Action, select the Action type and preset in the Add Actions item and click the <Add> button.

17) To delete the added Action, click the trash can icon on the right

18) When you have completed the Action setup, click the 'NEXT' button to move on to the next step.

6 Action Rules

Rule Summary

Information

Rule Name

Trigger

Trigger

Conditions

Schedule

Actions

Action

Action

Action


19) Check the settings in Summary.

20) After completing the review, click the 'APPLY' button to create the rule.

7 Statistics

1.Counting

This item can be viewed by processing the number of triggers of AI security items.

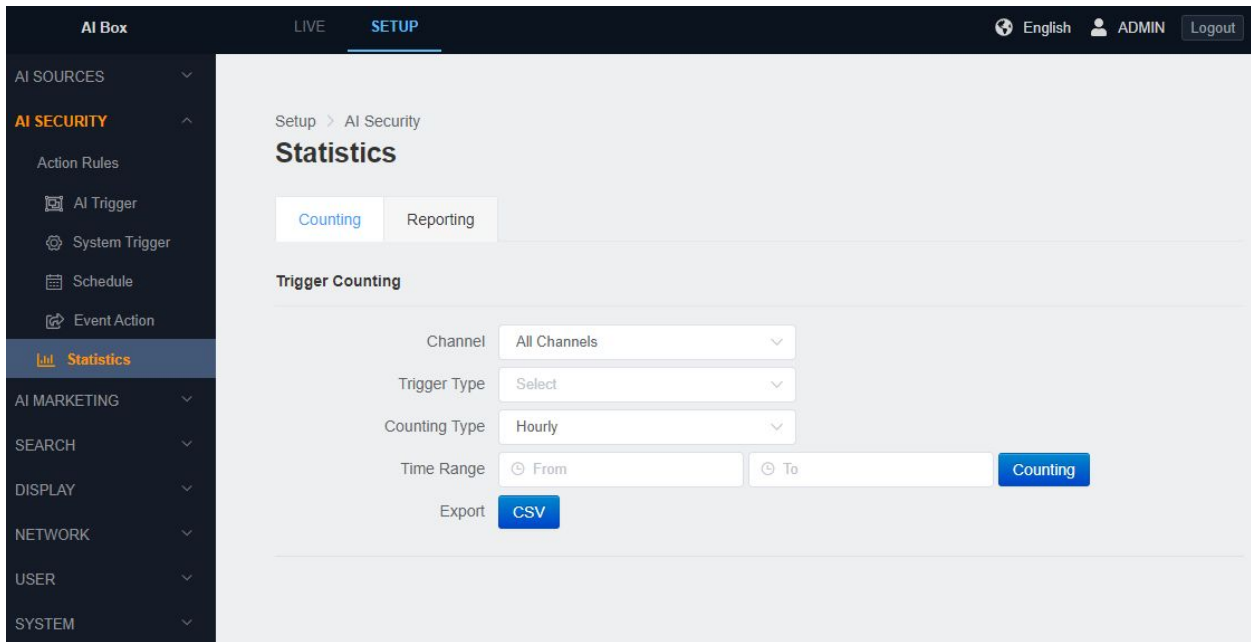


- 1) In the Settings tab, enter the Statistics menu under the AI Security menu.
- 2) Select the desired channel and trigger type.
- 3) Choose whether to process statistics by day or by time.
- 4) Set the desired time interval for processing and press the Counting tab to display the searched content at the bottom.
- 5) If you press the CSV button, you can download the searched contents in CSV file format.

7 Statistics

2. Reporting

It is a function to periodically send the statistics data to a specific administrator or automatically upload the data by FTP.

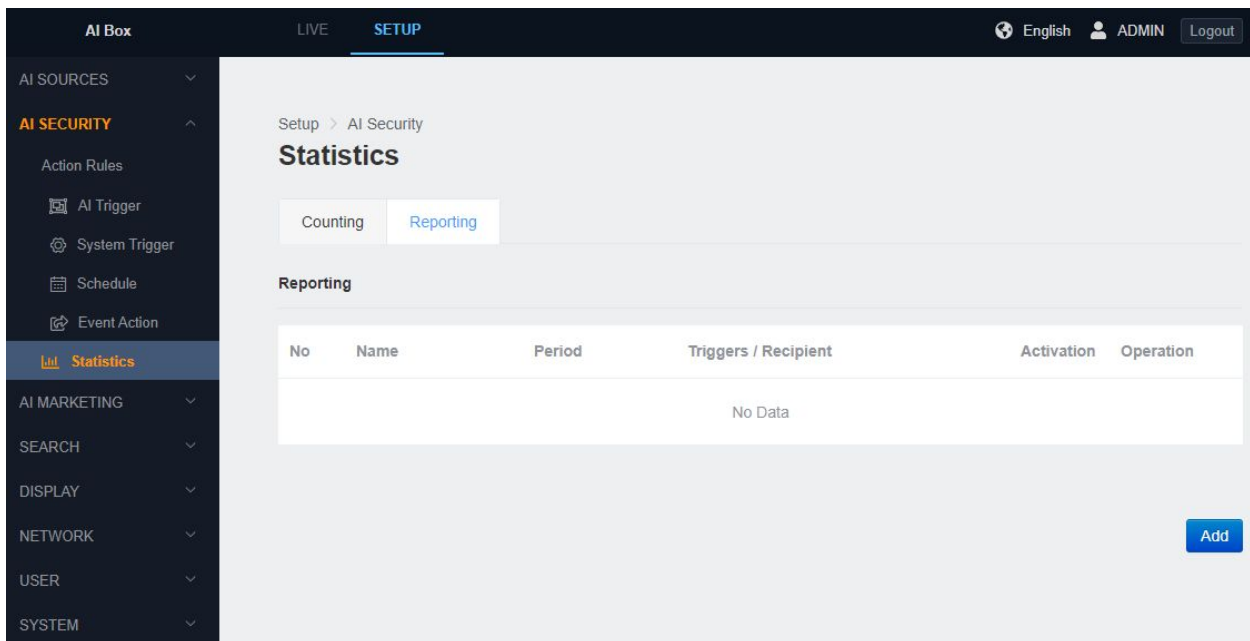

The screenshot shows the 'AI Box' interface. The top navigation bar includes 'LIVE' and 'SETUP' tabs, with 'English', 'ADMIN', and 'Logout' options. The left sidebar lists various categories: AI SOURCES, AI SECURITY (expanded), AI MARKETING, SEARCH, DISPLAY, NETWORK, USER, and SYSTEM. Under 'AI SECURITY', the 'Statistics' option is selected. The main content area shows the 'Setup > AI Security' path and the 'Statistics' title. There are two tabs: 'Counting' and 'Reporting'. The 'Reporting' section contains a table with the following structure:

No	Name	Period	Triggers / Recipient	Activation	Operation
No Data					


An 'Add' button is located at the bottom right of the table area.

- 1) Set the report name and select a frequency.
- 2) Select the trigger to receive the report.
- 3) Select the recipient by e-mail: Settings-> AI Security-> Network-> Presets of email items are available.
- 4) If you set the receiver to FTP, you can set the FTP server for uploading statistics datum.


8 AI Marketing

This setting corresponds to the Retail solution item of AI BOX.

Usage: In case of CCTV security, the event occurrence count is mainly managed as a cumulative count. However, if you apply an acceleration count instead of a cumulative count, you can find out the status of the customers who visited the store every predetermined time.

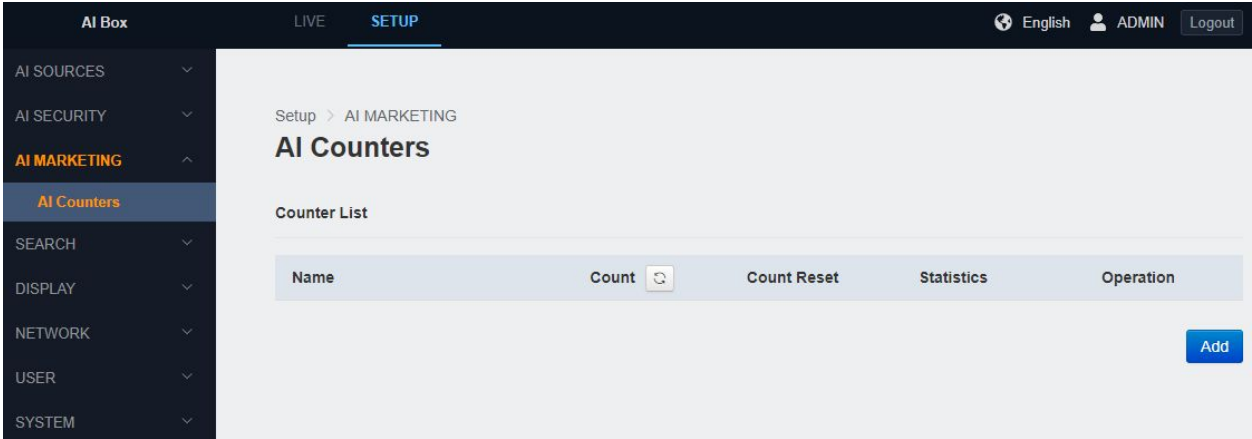

- Press the Add button to add an AI counter.

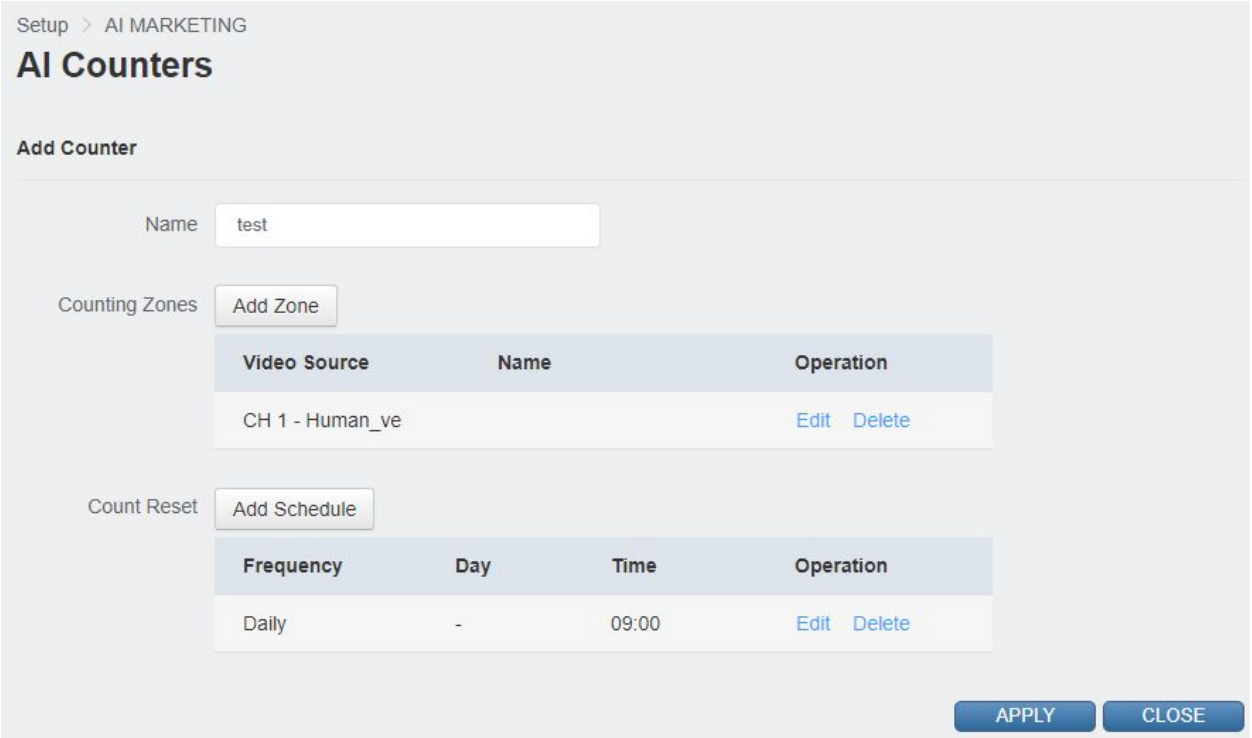

8 AI Marketing

- 1) Name the counter.
- 2) Add the area where you want to use counter.
- 3) Add a schedule to specify when to reset the counter during the day.
- 4) Press the Apply button to create the counter.

Zone Setup



Video Source	CH 1 - Human_ve	Zone Name	
Target Object	Person	Zone Type	Line
		Count Increase	Forward
		Count Decrease	Reverse

CANCEL APPLY

- This is an additional zone setting screen.



8 AI Marketing

- 1) Select the video source.
- 2) Select the detection target.
- 3) Enter the name of the area.
- 4) Select whether to make a counter cross line or line in / out area.
- 5) It sets the increase and decrease of count.
- 6) Click the Apply button to save the above.

Setup > AI MARKETING

AI Counters

Counter List

Name	Count 	Count Reset	Statistics	Operation
test	2	<input type="button" value="Reset"/>		Edit Delete

- The AI counter is created.
- 1) Possible to check the current count by the refresh button next to the Count.
 - 2) Press the counter reset button to reset.
 - 3) Possible to print the counter statistics by pressing the Statistics button.
 - 4) Possible to modify or delete the counter by pressing the Edit and Delete button.

8 AI Marketing

Counter Statistics

Counter

Resolution

Period -

Time Filter

Days of week Filter

Data Format


Request URI

- This is the screen when the counter statistics button is pressed.
- 1) Types of counters to output or respond to statistics. Multiple selection is also possible.
 - 2) Select the unit.
 - 3) Select the period you want to send statistics.
 - 4) Possible to filter only business hours.
 - 5) Possible to filter only 5 days a week.
 - 6) Possible to respond to the request in JSON format and download it in CSV format.

9 Other Menu

1. Search

- Event Log

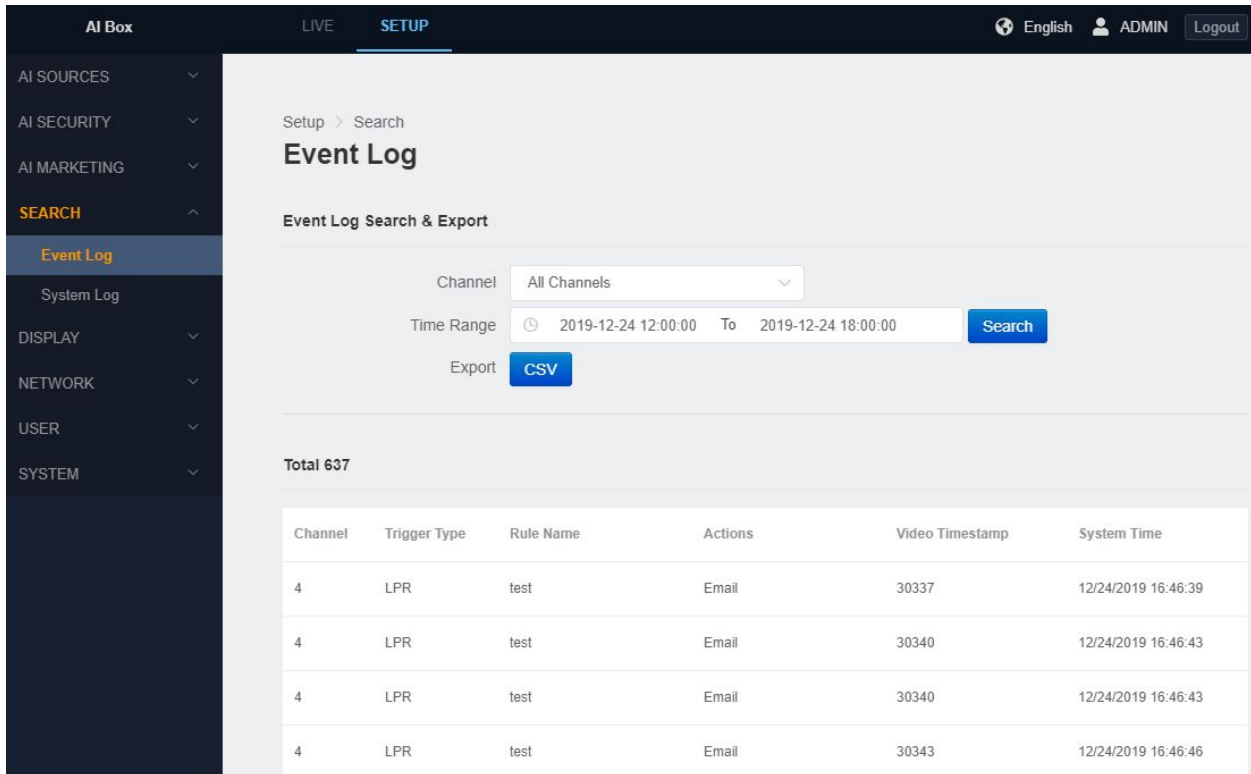


The screenshot shows the 'Event Log' page in the AI Box interface. The top navigation bar includes 'AI Box', 'LIVE', 'SETUP', 'English', 'ADMIN', and 'Logout'. The left sidebar lists various menu items, with 'SEARCH' and 'Event Log' highlighted. The main content area shows the 'Event Log Search & Export' section with filters for Channel (All Channels), Time Range (2019-12-24 12:00:00 to 2019-12-24 18:00:00), and an Export button for CSV. Below the filters, it indicates 'Total 637' events. A table displays the following data:

Channel	Trigger Type	Rule Name	Actions	Video Timestamp	System Time
4	LPR	test	Email	30337	12/24/2019 16:46:39
4	LPR	test	Email	30340	12/24/2019 16:46:43
4	LPR	test	Email	30340	12/24/2019 16:46:43
4	LPR	test	Email	30343	12/24/2019 16:46:46

You can search or download the action events that occurred in 'Action Rules' of the 'AI Security' menu in CSV format.

- System Log

9 Other Menu

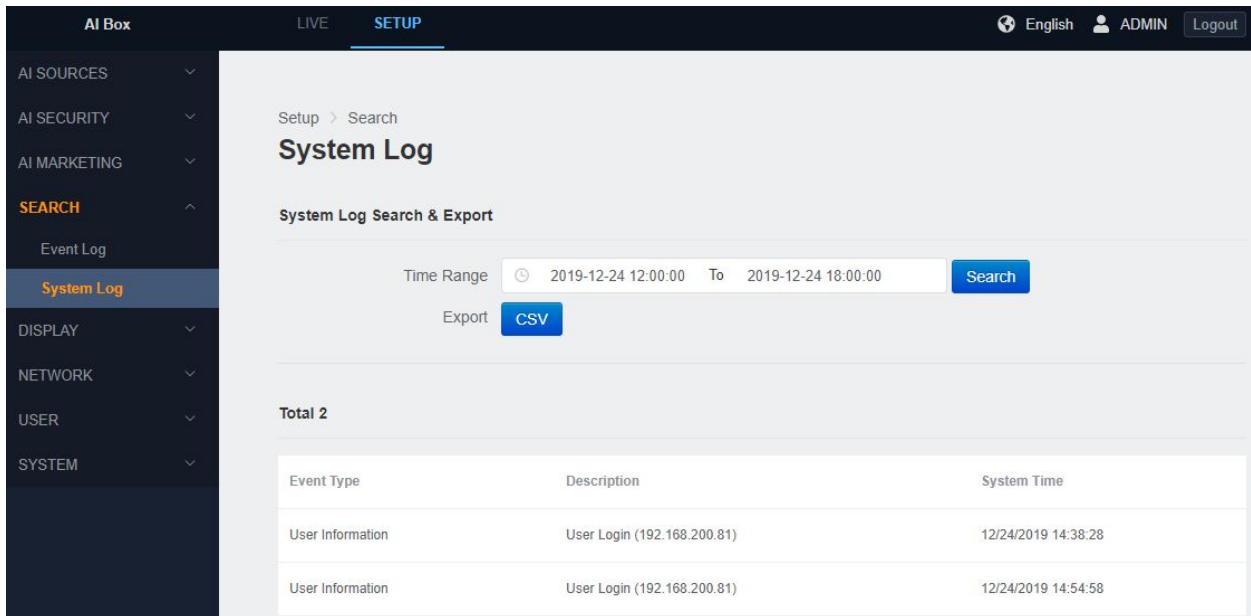

The screenshot shows the 'System Log' page in the AI Box setup menu. The left sidebar contains a navigation menu with categories: AI SOURCES, AI SECURITY, AI MARKETING, SEARCH (highlighted), DISPLAY, NETWORK, USER, and SYSTEM. Under 'SEARCH', 'System Log' is selected. The main content area shows 'Setup > Search' and 'System Log'. Below this is a 'System Log Search & Export' section with a 'Time Range' filter set to '2019-12-24 12:00:00 To 2019-12-24 18:00:00' and a 'Search' button. An 'Export' button with 'CSV' is also visible. Below the search area, it says 'Total 2' and displays a table with two rows of log entries.


Event Type	Description	System Time
User Information	User Login (192.168.200.81)	12/24/2019 14:38:28
User Information	User Login (192.168.200.81)	12/24/2019 14:54:58

You can search and download the necessary system logs such as user login or system startup etc. in CSV format.

2. Display

- OSD

9 Other Menu

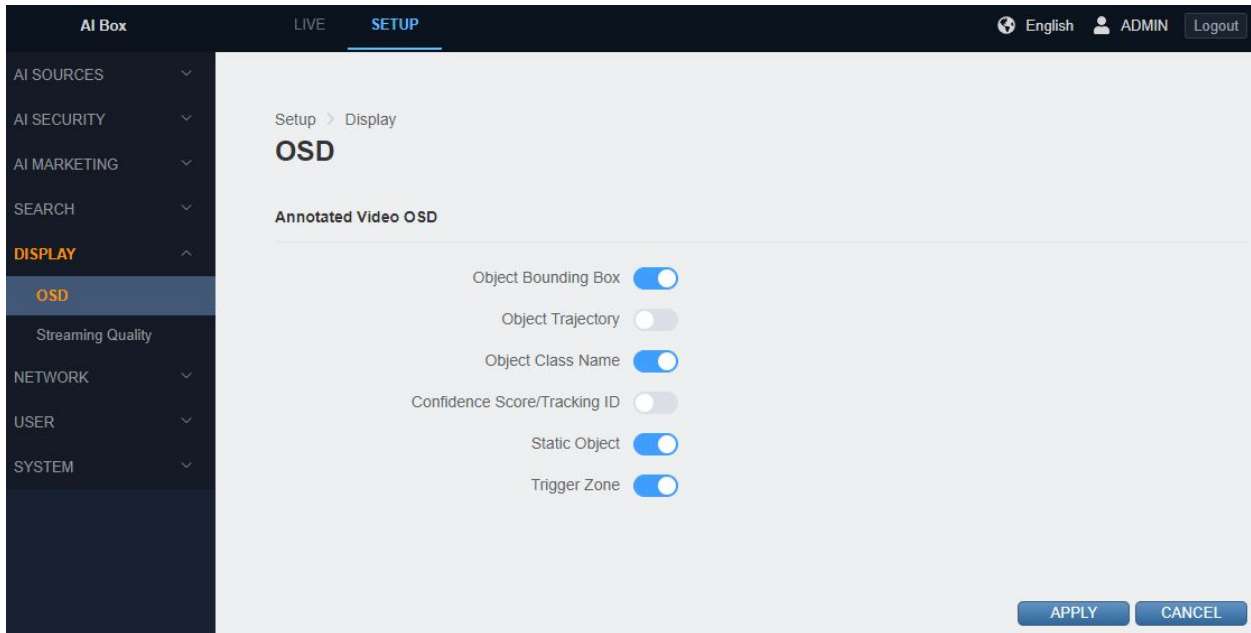

This is the setup for OSD information displayed in Annotated Video's video of AI BOX.

- 1) Object bounding box: Determining whether or not the box is displayed on the object border.
- 2) Object Trajectory: Determines whether or not the screen is displayed on the moving object.
- 3) Object Class Name: Determining whether to display people or cars on the screen.
- 4) Confidence Score/Tracking ID: used for AI debugging.
- 5) Trigger Zone: Determining whether the trigger rule display line or figure is displayed on the screen.

9 Other Menu



- Streaming Quality

9 Other Menu

The screenshot shows the 'AI Box' setup interface. The top navigation bar includes 'LIVE' and 'SETUP' tabs, with 'English', 'ADMIN', and 'Logout' options on the right. A left sidebar lists menu items: AI SOURCES, AI SECURITY, AI MARKETING, SEARCH, DISPLAY (highlighted), OSD, Streaming Quality (highlighted), NETWORK, USER, and SYSTEM. The main content area is titled 'Setup > Display Streaming Quality' and contains the 'Annotated Video Streaming Quality' section. This section features a table with columns for View, Quality, Channel, and Bitrate. The 'Multiview' view has a 'Quality' dropdown set to 'Highest' and lists channels CH 0 through CH 8 with their respective bitrates. The 'Singleview' view also has a 'Quality' dropdown set to 'Highest' and lists the same channels. 'APPLY' and 'CANCEL' buttons are located at the bottom right of the table area.

View	Quality	Channel	Bitrate
Multiview	Highest	CH 0	8000 kbps
		CH 1	5600 kbps
		CH 2	4400 kbps
		CH 3	4400 kbps
		CH 4	5600 kbps
		CH 5	4400 kbps
		CH 6	4400 kbps
		CH 7	4400 kbps
		CH 8	4400 kbps
Singleview	Highest	CH 0	8000 kbps
		CH 1	5600 kbps
		CH 2	4400 kbps
		CH 3	4400 kbps
		CH 4	5600 kbps
		CH 5	4400 kbps
		CH 6	4400 kbps
		CH 7	4400 kbps
		CH 8	4400 kbps


AI BOX supports not only video streaming for each RTSP channel but also multi-view streaming showing all channels as one channel.

It is possible to make settings for that streaming quality.

3. System

- License key

9 Other Menu

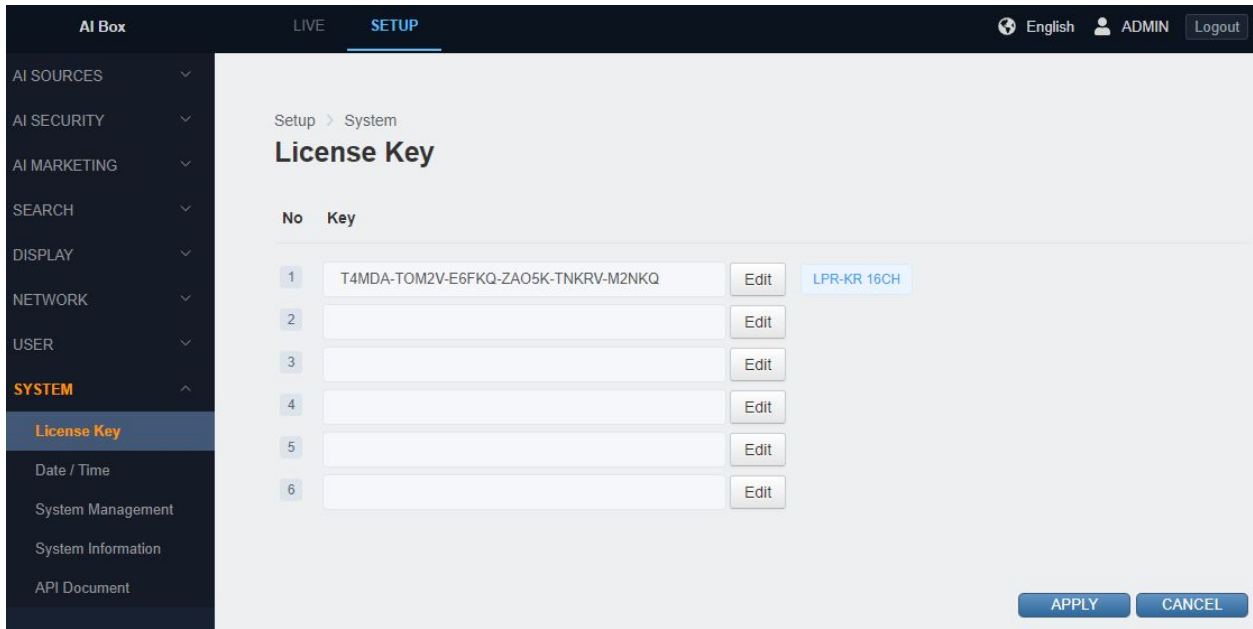

Enter a license key to activate additional features that require a license.

If the license is successfully registered, the corresponding item is displayed on the right.

- **System information**

You can find the model name, firmware version, MAC address and etc.






- **API documentation**

API document is embedded to work with AI BOX.

10 Face Recognition

1. Face recognition license required

To use the face recognition function, you need to purchase FR chip separately.
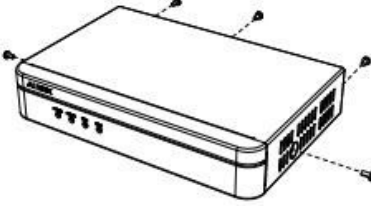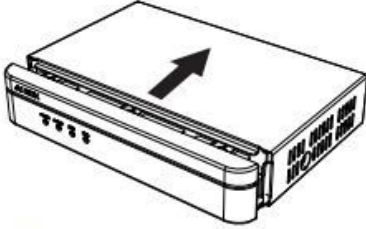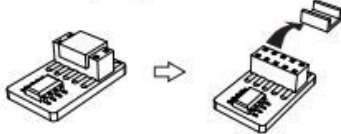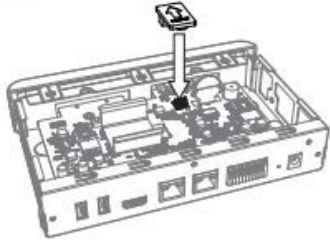
<p>STEP 1 Separate five screws on the side and back of the AI BOX.</p>  <p>CAUTION Gloves should be worn before disassembling the top cover. Otherwise you may hurt your hand.</p> <p>1</p>	<p>STEP 2 Slide the top cover back to remove it.</p>  <p>STEP 3 Remove the cover of the part shown in the picture of the package FACE RECOGNITION chip.</p>  <p>2</p>	<p>STEP 4 Plug the FACE RECOGNITION into the 10 pins of the motherboard.</p>  <p>CAUTION The direction of FACE RECOGNITION CHIP should be inserted with the arrow facing the front.</p>  <p>STEP 4 Assemble the top cover and tighten the screws in the reverse of the step 1 and 2 division.</p> <p>3</p>
--	--	--

<p>Warranty of the product</p> <ol style="list-style-type: none">1. The warranty is 2 years.2. Face Recognition is shipped from AI BOX or purchased separately from the Face Recognition licenses key protector.3. AI BOX products that support Face Recognition are equipped with Face Recognition licenses key protector by default. <p>4</p>	<p>Rev00 MX41AUD4</p>	 <p>Install Guide</p> <p>WARNING If static electricity occurs during installation, the product may not work. Be sure to wear gloves and avoid static electricity.</p>
--	---------------------------	--


10 Face Recognition

2. Note of installing the camera for Face Recognition

1) It should be installed in front of the person's direction.

(The left and right angles at which the camera faces the face is around 30 degrees)

2) Horizontal, Install the camera at an angle of 15 degrees to the human face.

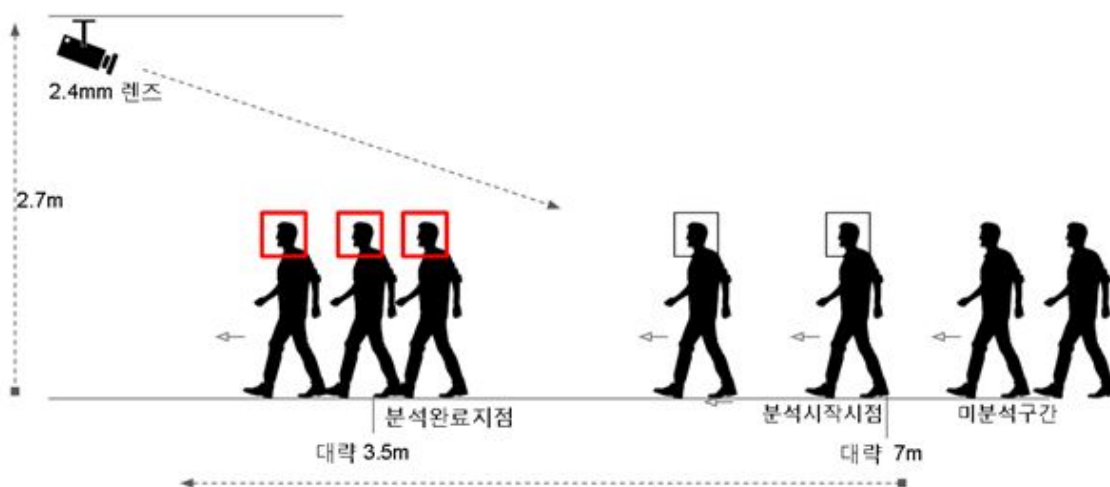

<Camera installation example to increase accuracy>

3) You can increase the accuracy if you have about 4 seconds from the start of the analysis to the end of the analysis.

4) The lower the camera height, the higher the accuracy (closer to the height of the object).

3. Face recognition engine applied

10 Face Recognition

AI Box LIVE SETUP English ADMIN Logout

AI SOURCES

Video Source

False Alarm Filter

AI SECURITY

AI MARKETING

SEARCH

DISPLAY

NETWORK

USER

SYSTEM

Setup > AI Sources

Video Source

CH	NAME	URL	Discovery	AI Algorithm	1884 / 2000	STATUS
1	Human_ve	file:///tmp/usbdev/gasan_1080p.mp4	TCP	Human / Vehicle - Normal (F)		Disconnected
2	Gender	file:///tmp/usbdev/face.mp4	TCP	Human - Normal		Disconnected
3	Privacy	file:///tmp/usbdev/person_02.mp4	TCP	Human - Far		Disconnected
4	LPR	file:///tmp/usbdev/lpr_front_1.mp4	TCP	LPR - KOR (Faster Objects)		Disconnected
5	Snow	file:///tmp/usbdev/snow_06.mp4	TCP	Human - Normal		Disconnected
6	Fisheye	file:///tmp/usbdev/fisheye_6.mp4	TCP	Human - Normal		Disconnected
7	Office	rtsp://ADMIN:*****@192.168.200.229:554/live/ma	TCP	Human - Normal		Disconnected
8		rtsp://username:password@ip:port/url	TCP	None		


APPLY CANCEL

Set the AI algorithm to Face Recognition in the Video Source menu under AI Source.

AI source -> Set AI Algorithm to Face Recognition in the Video source menu.

4. AI Trigger setting

10 Face Recognition

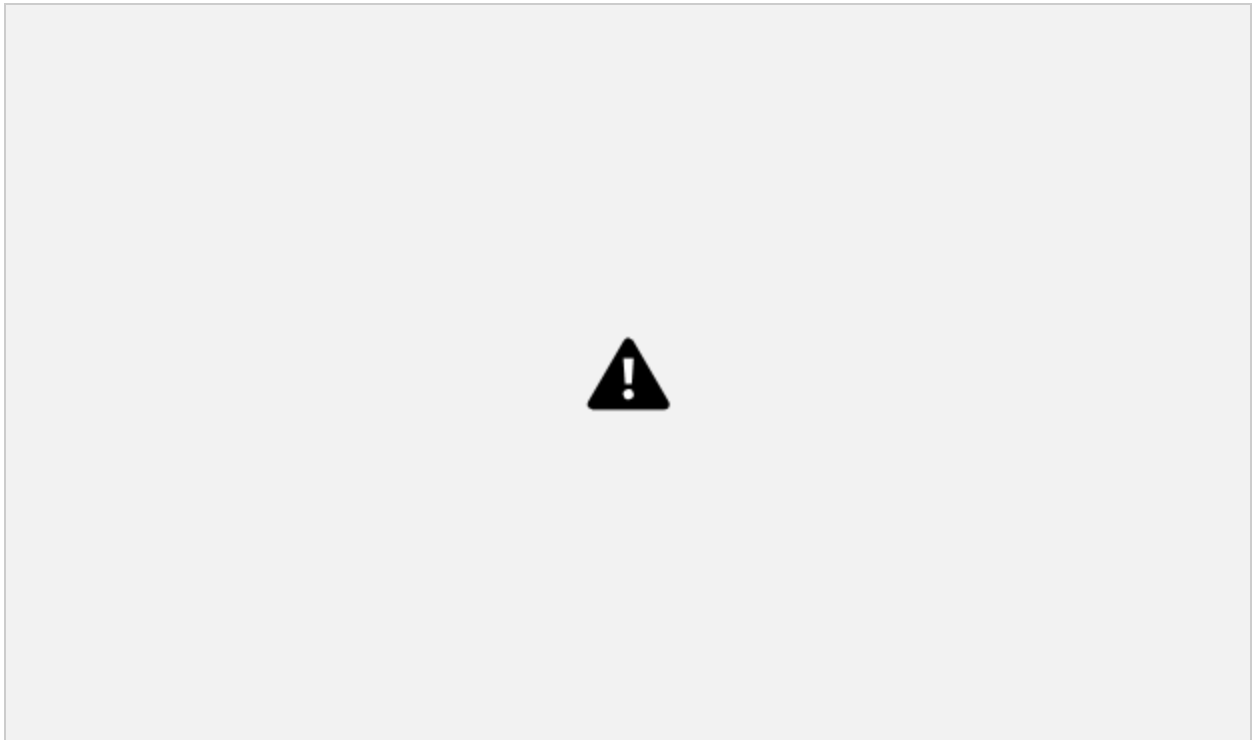

Set up the trigger in the Face Detection tab of the AI Trigger menu under AI Security.

AI security -> AI trigger -> Set the trigger in the face detection menu.

- 1) Set the Preset name.
- 2) Select the Video source.
- 3) Select the Recognition mode.
 - Unregistered: triggers people who do not belong to any group.
 - Group comparison: Compare people registered in the selected group to trigger the appropriate person.
 - Face Attribute Filtering: It triggers by filtering the age or gender by the result of face analysis.
- 4) Aliveness detection (Liveness -> Aliveness 변경 되어여 함)

10 Face Recognition


생체 감지 기능을 ON/OFF 할 수 있습니다.

You can turn the Aliveness detection ON or OFF.

5) Advanced Settings / Counter Reset

It is possible to reset every day at the designated time. Click the Reset button to reset the current counter.


5. Create a face recognition database

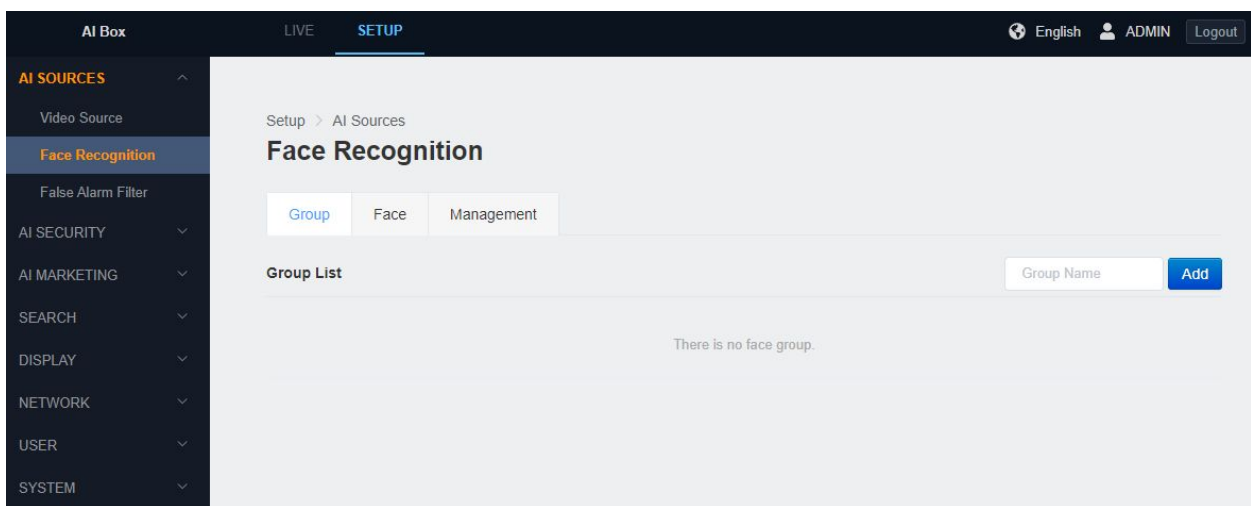

You can create a group of face recognition databases in the 'Groups' tab of the 'Face Detection' menu under 'AI Sources'.

AI source -> Face recognition -> It is possible to create a group of face recognition databases from the Group menu.

10 Face Recognition

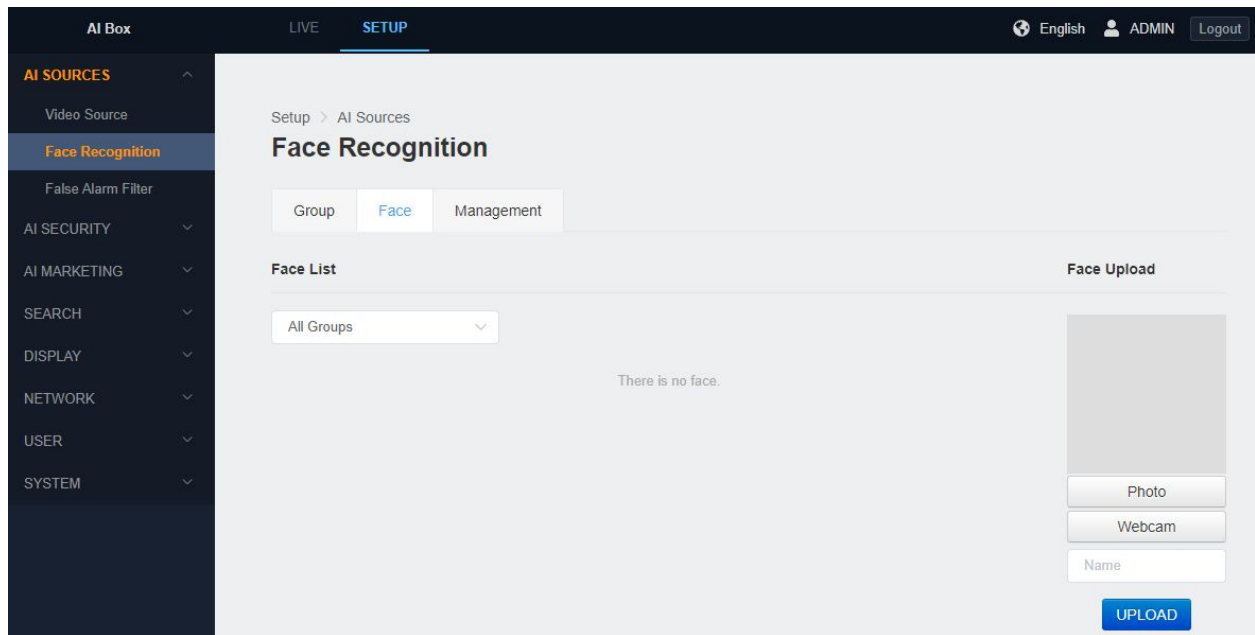


Face data can be added individually in the 'Face' tab of the 'Face Detection' menu under 'AI Source'.

AI source -> Face recognition -> It is possible to create a group of face recognition databases from the Group menu.

Click the photo button to upload a picture. In the case of a photo, it can resize by itself even if the size is large. Photos with only faces taken from the front are more accurate.

Click the Webcam button to allow you to directly register photos taken with the Webcam connected to your computer to AI BOX.

10 Face Recognition

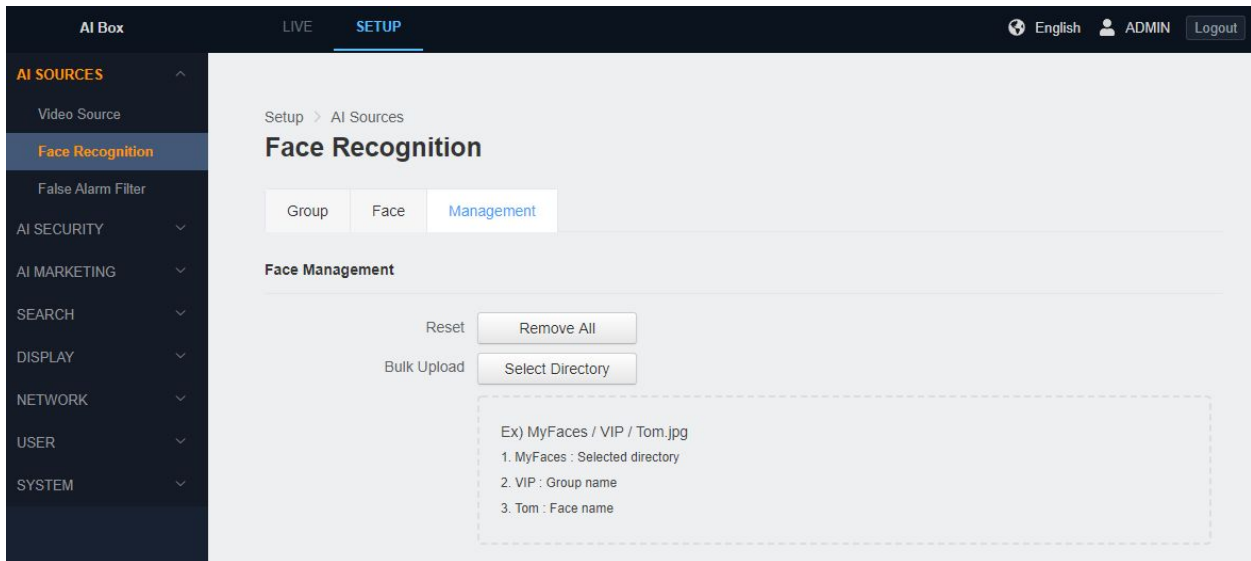

You can manage them in bulk from the 'Admin' tab under the 'Face Detection' menu under 'AI Source'.

AI source -> Face recognition -> It is possible to manage them in bulk from the Management menu

Remove All: Delete all face data in AI BOX.

Bulk Upload: This function is to register all the pictures in a folder. The rules in the folder are:


e.g.: MyFaces / VIP / Tom.jpg

The folder in the selected folder is the group name and the file name is the user name of the face.

11 License Plate Recognition

1. License plate recognition license required

License plate recognition requires a separate license. The license plate recognition algorithm is activated when you purchase the license.

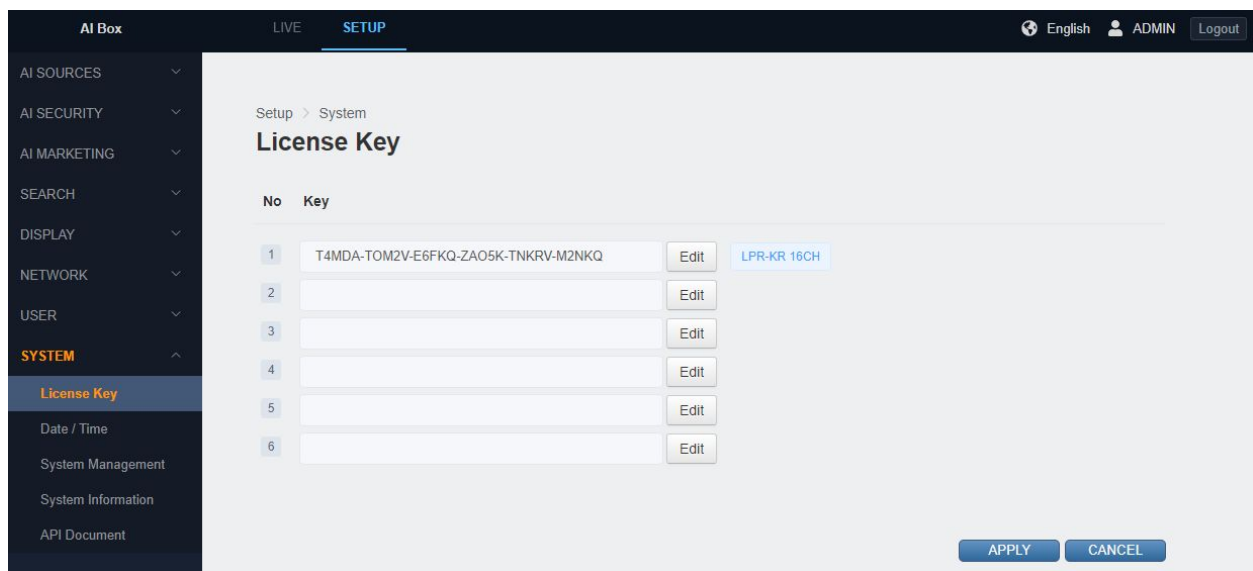

You can find the license key in the 'License Keys' menu under 'System'.

Setting - System menu -> License Key menu -> Check the license key.

2. Note of installing the camera for License Plate Recognition

License plate recognition requires a separate license. The license plate recognition algorithm is activated when you purchase the license.

- 1) The recognition accuracy is high when installed similar to the height of the license plate of the vehicle.
- 2) Camera installation and camera lens should be selected properly according to vehicle speed.

11 License Plate Recognition

번호판 인식 카메라 설치시 정확도를 높이는 예시

차량 속도가 빠를 경우 (60km/s 미만)



Example 1: Example of improving accuracy when installing a license plate recognition camera

- Fast vehicle speed (less than 60 km/sec)
- Same as license plate height / 10.3mm lens
- Analysis completion point / Analysis start point / Unanalyzed interval
- About 4~5m / About 20m

번호판 인식 카메라 설치시 정확도를 높이는 예시

차량 속도가 느린 경우 (10km/s 미만)




Example 2: Example of improving accuracy when installing a license plate recognition camera

- Slow vehicle speed (less than 10 km/sec)
- Same as license plate height / 2.4mm lens

11 License Plate Recognition

- c. Analysis completion point / Analysis start point / Unanalyzed interval
- d. About 1m / About 5m

3. License plate recognition algorithm

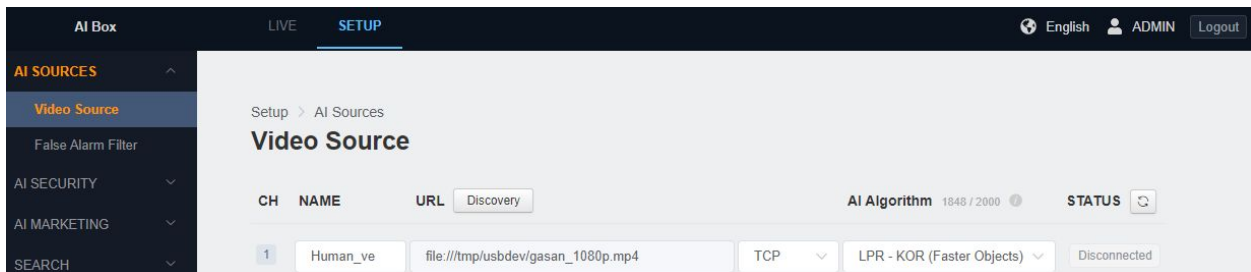

Apply the license plate recognition algorithm from the 'Image Source' menu under 'AI Source'.

AI source -> Video source -> Set AI Algorithm to LPR in the Video source menu.

4. Create License Plate Recognition Trigger

11 License Plate Recognition

Setup > AI Security

AI Trigger


Intrusion Occupancy Loitering Stopping Enter/Exit Line Crossing **LPR**

License Plate Recognition preset

Name:

Video Source: ▼

LPR - KOR (Faster Objects)

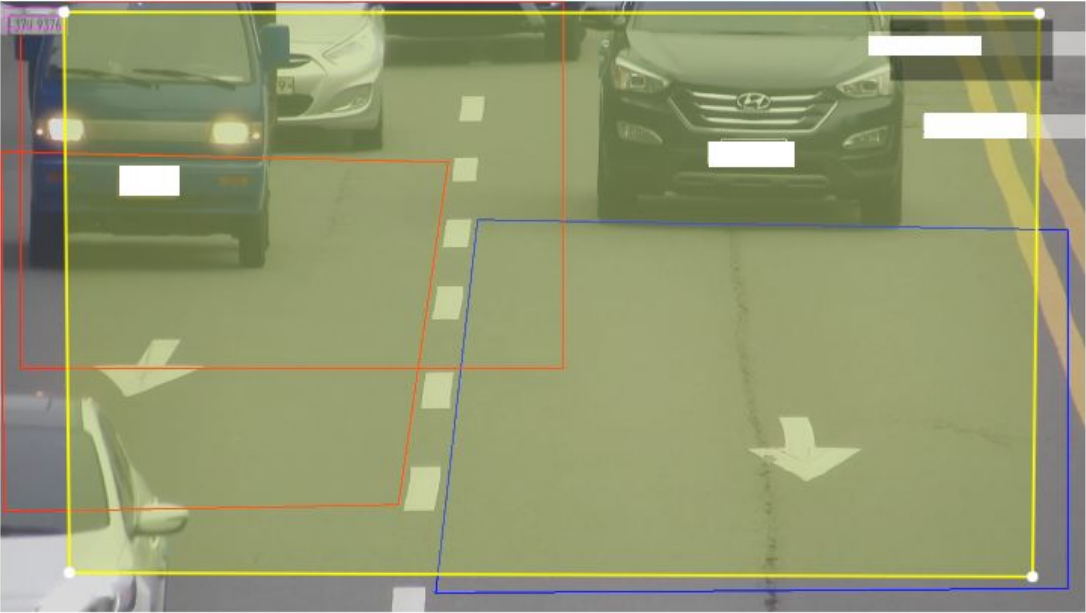

rtsp://ADMIN:****@192.168.200.223:5554/live/ch4

APPLY **CLOSE**

Create a license plate recognition trigger from the 'AI Triggers' menu under 'AI Security'.

Setting - AI SECURITY -> AI Trigger -> Create a license plate recognition trigger.

11 License Plate Recognition

- 1) Name the preset
- 2) Select the Video source
- 3) Draw the AREA BOX where the license plate is the largest (the closer the camera is, the larger the license plate).